

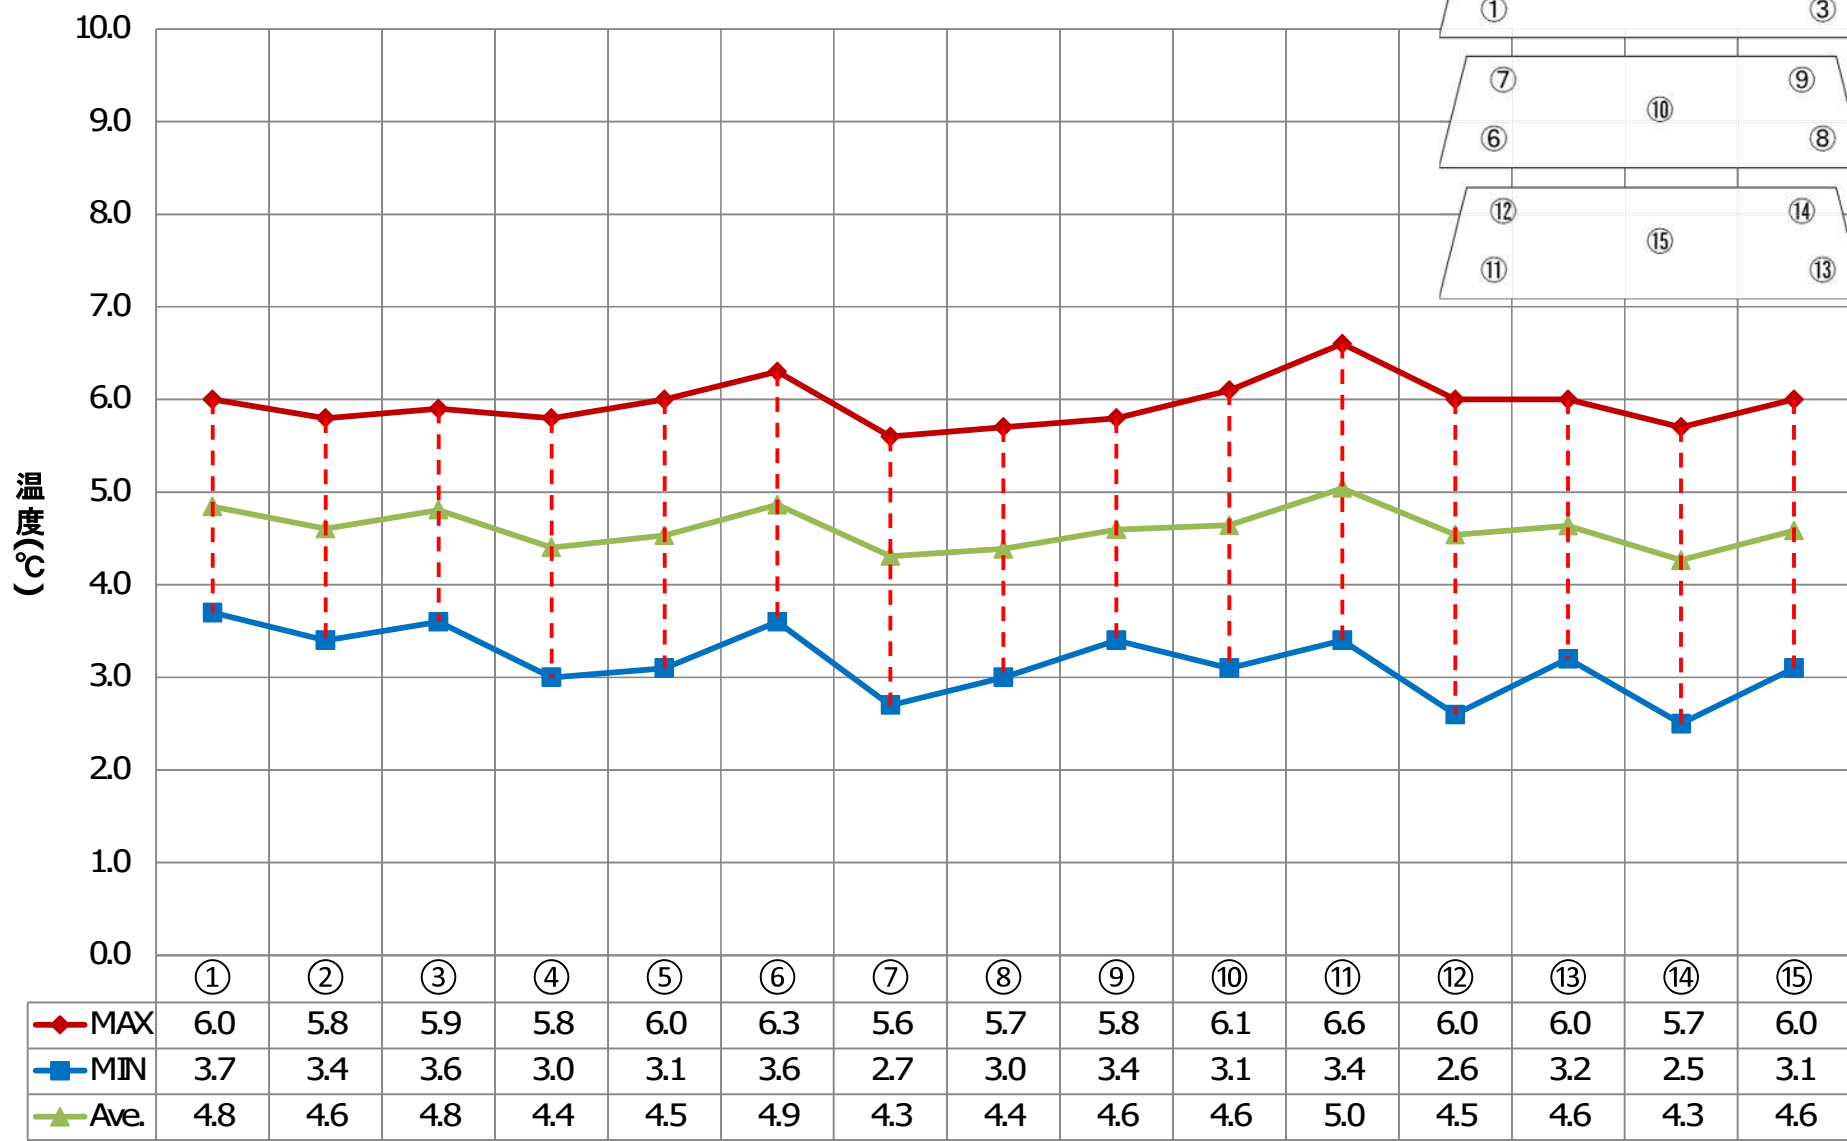
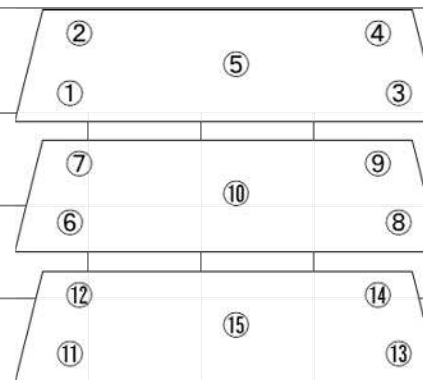



CH-106 EGEード 設定5°C RT30 RH60 無負荷

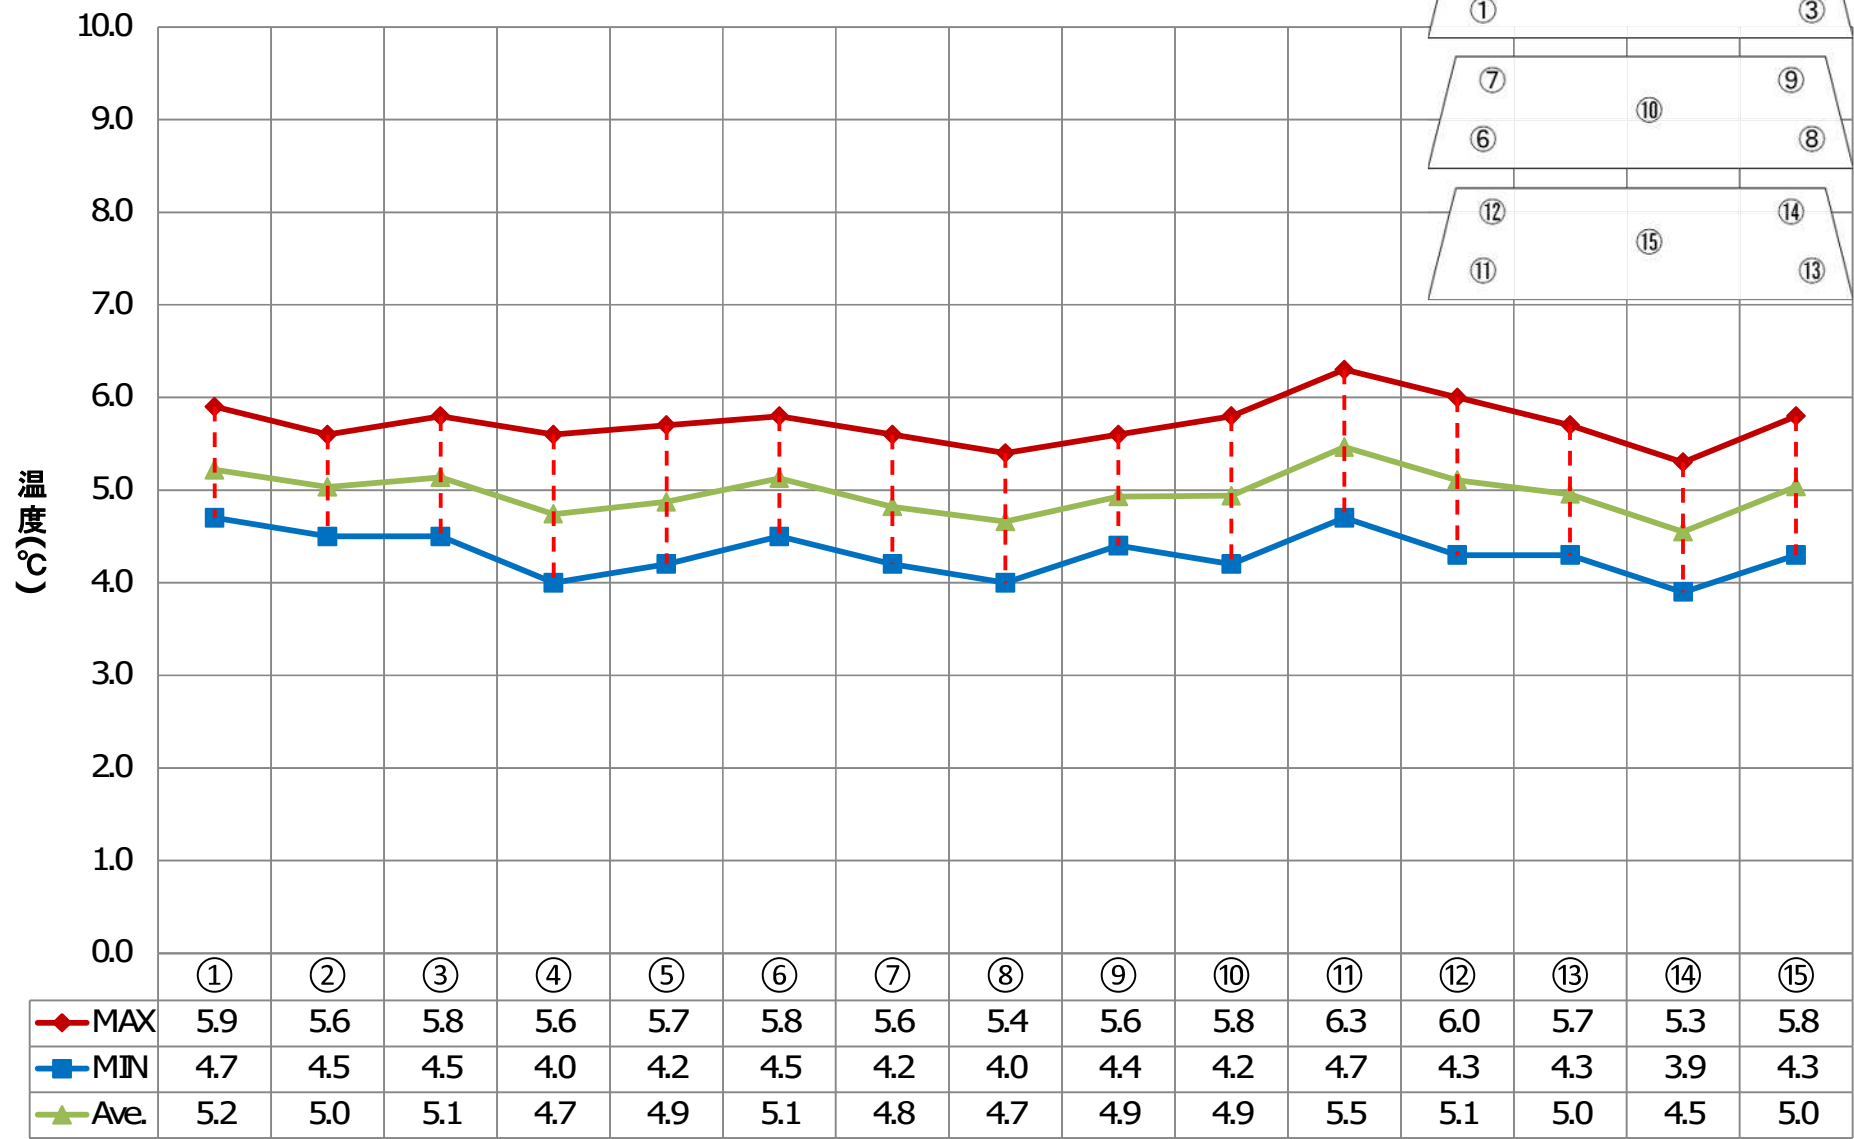


CH-106 HGEモード 設定5°C RT30RH60 無負荷

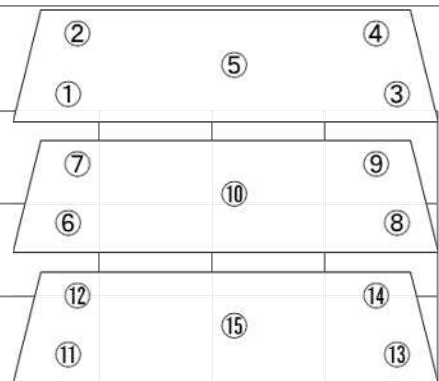



CH-106 ECモード 設定37°C RT30 RH60 無負荷

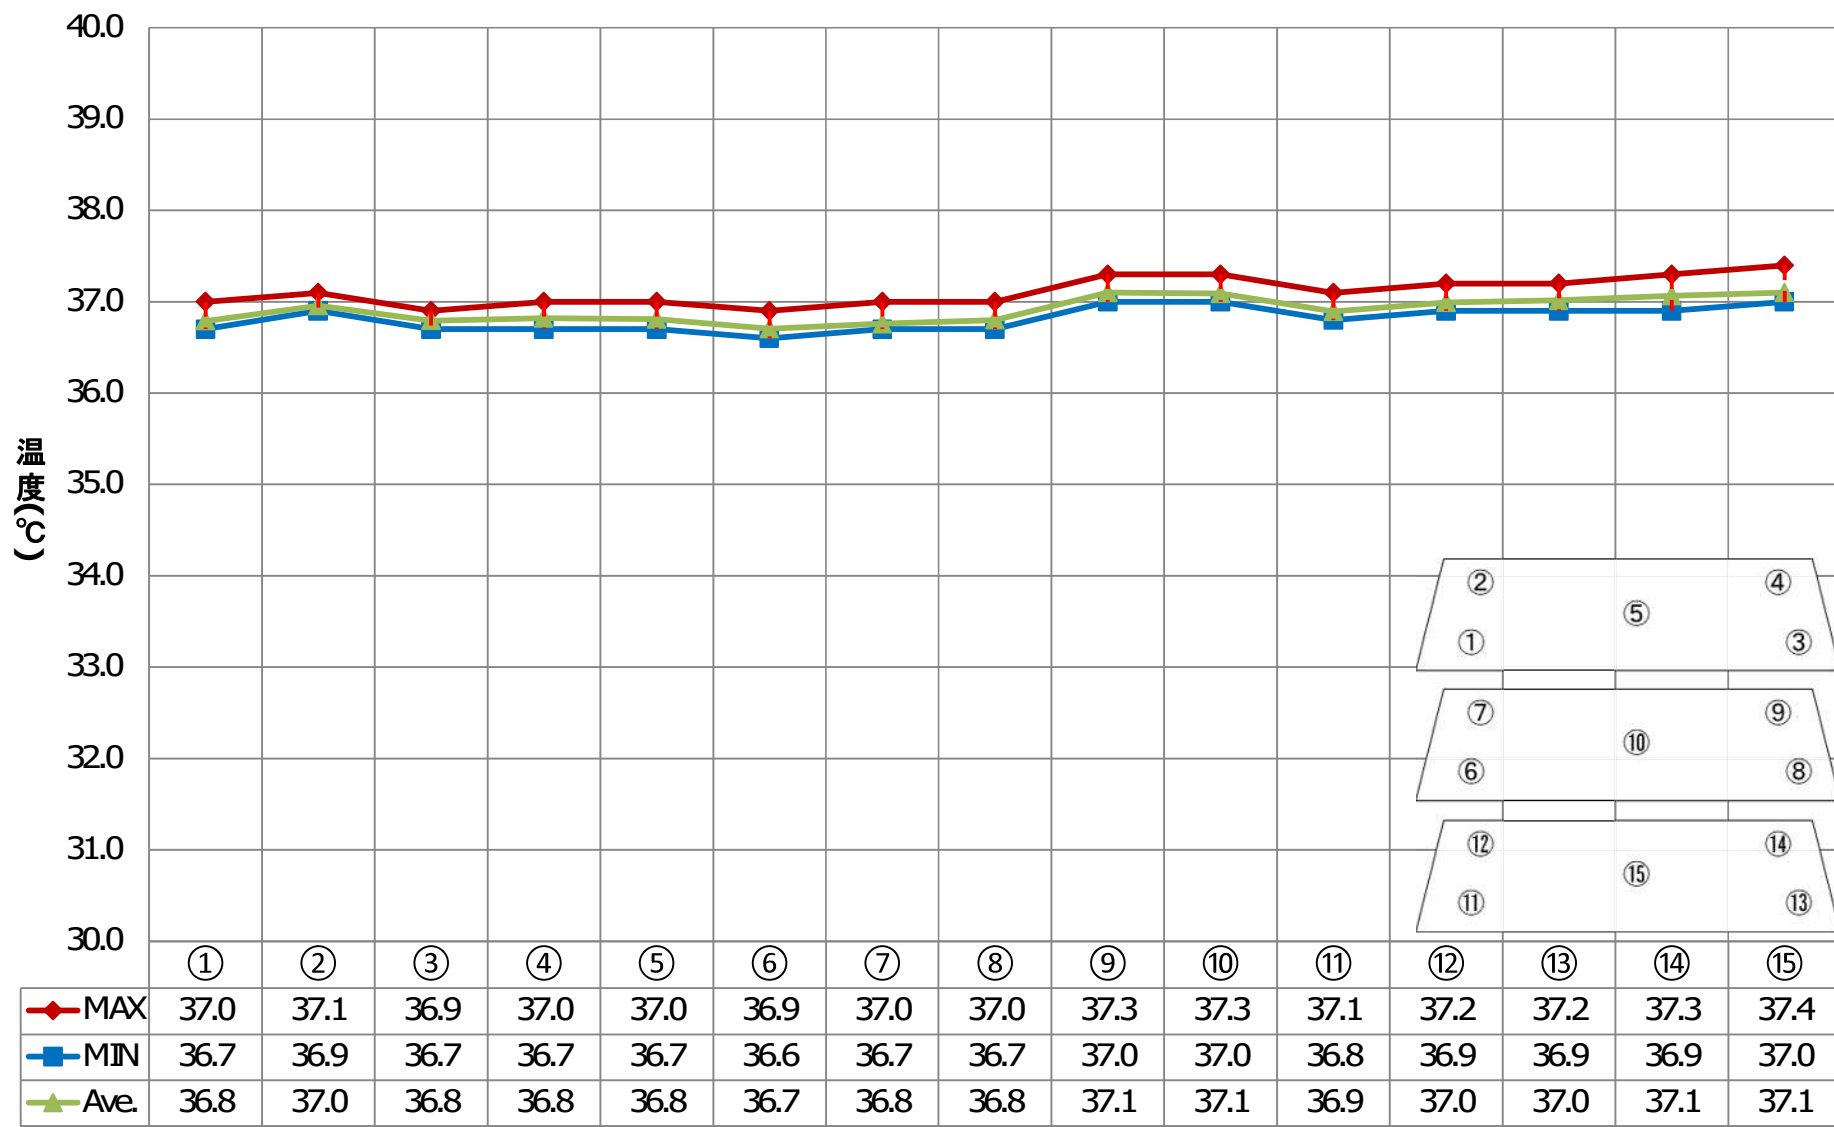



CIH-106 HCEード 設定37°C RT30 RH60 無負荷

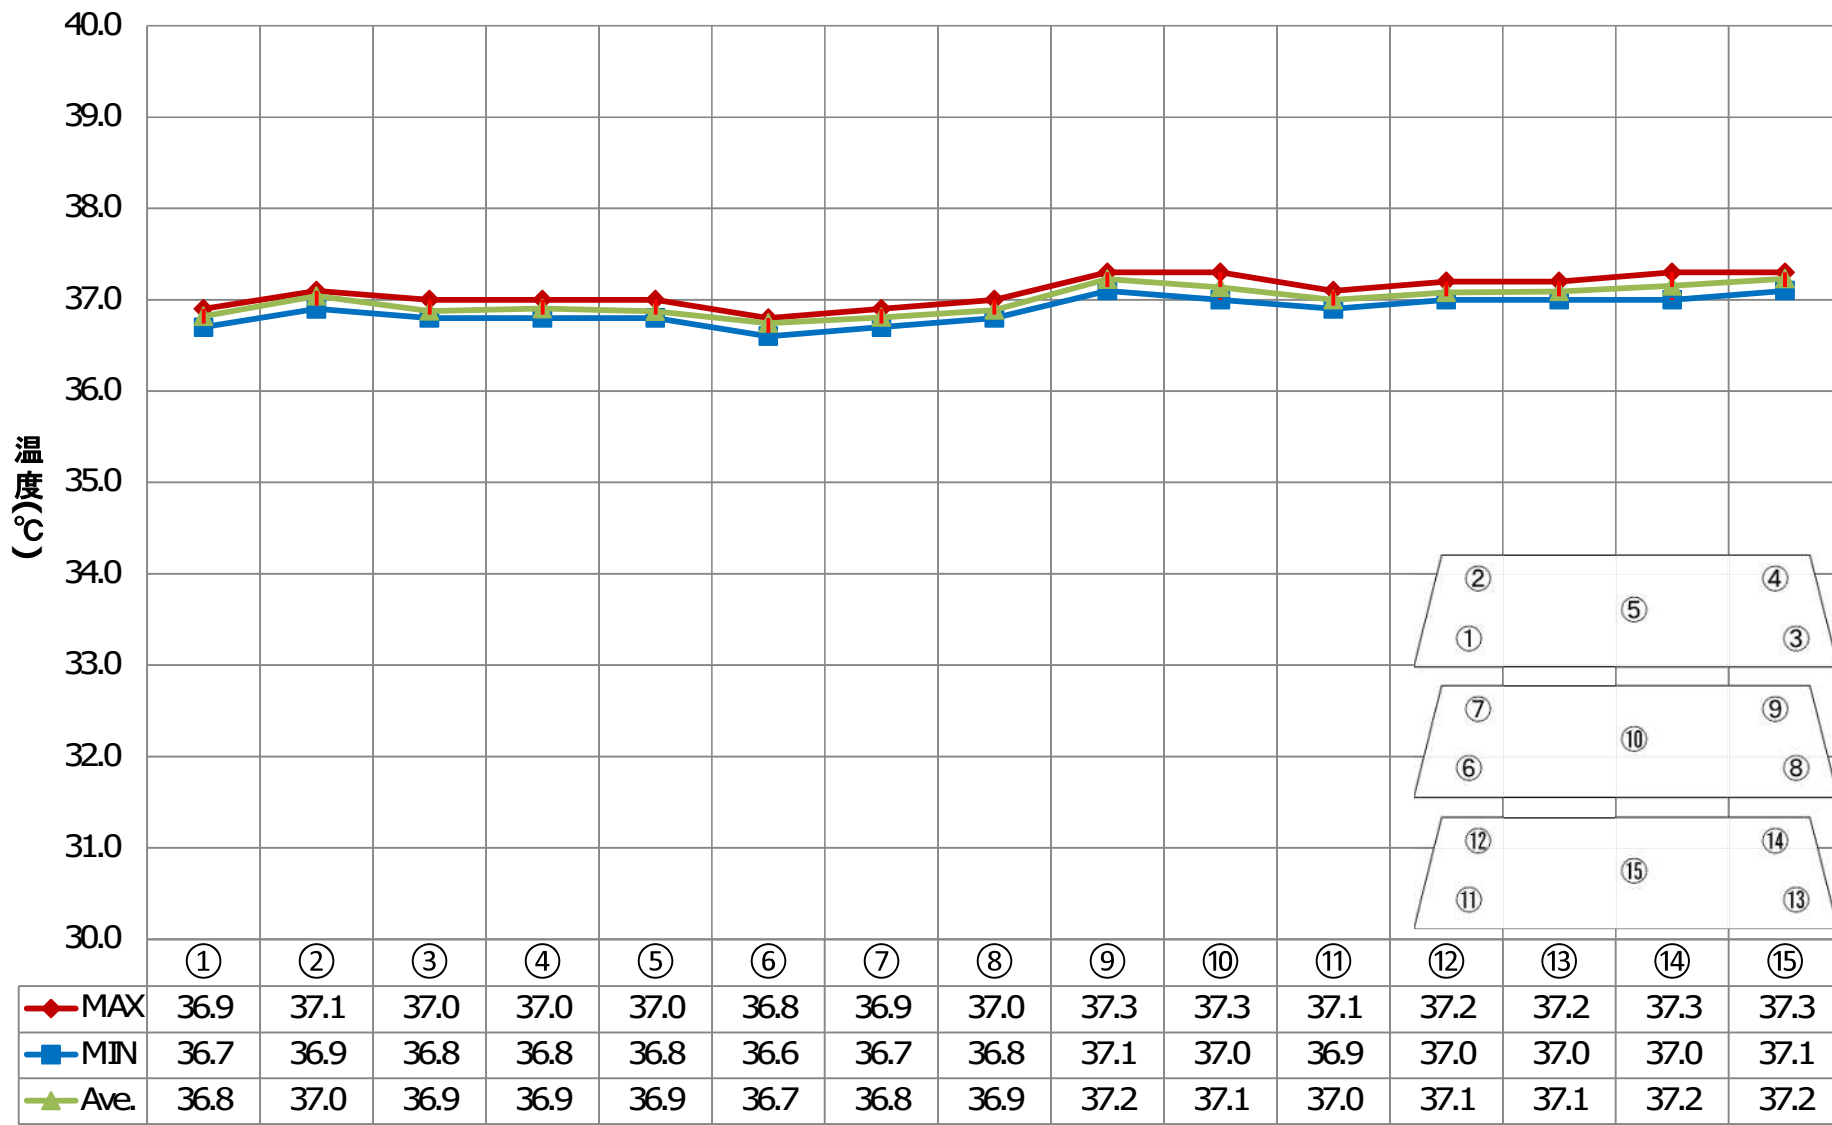


CH-178 ECEード 設定5°C RT30 RH60 無負荷

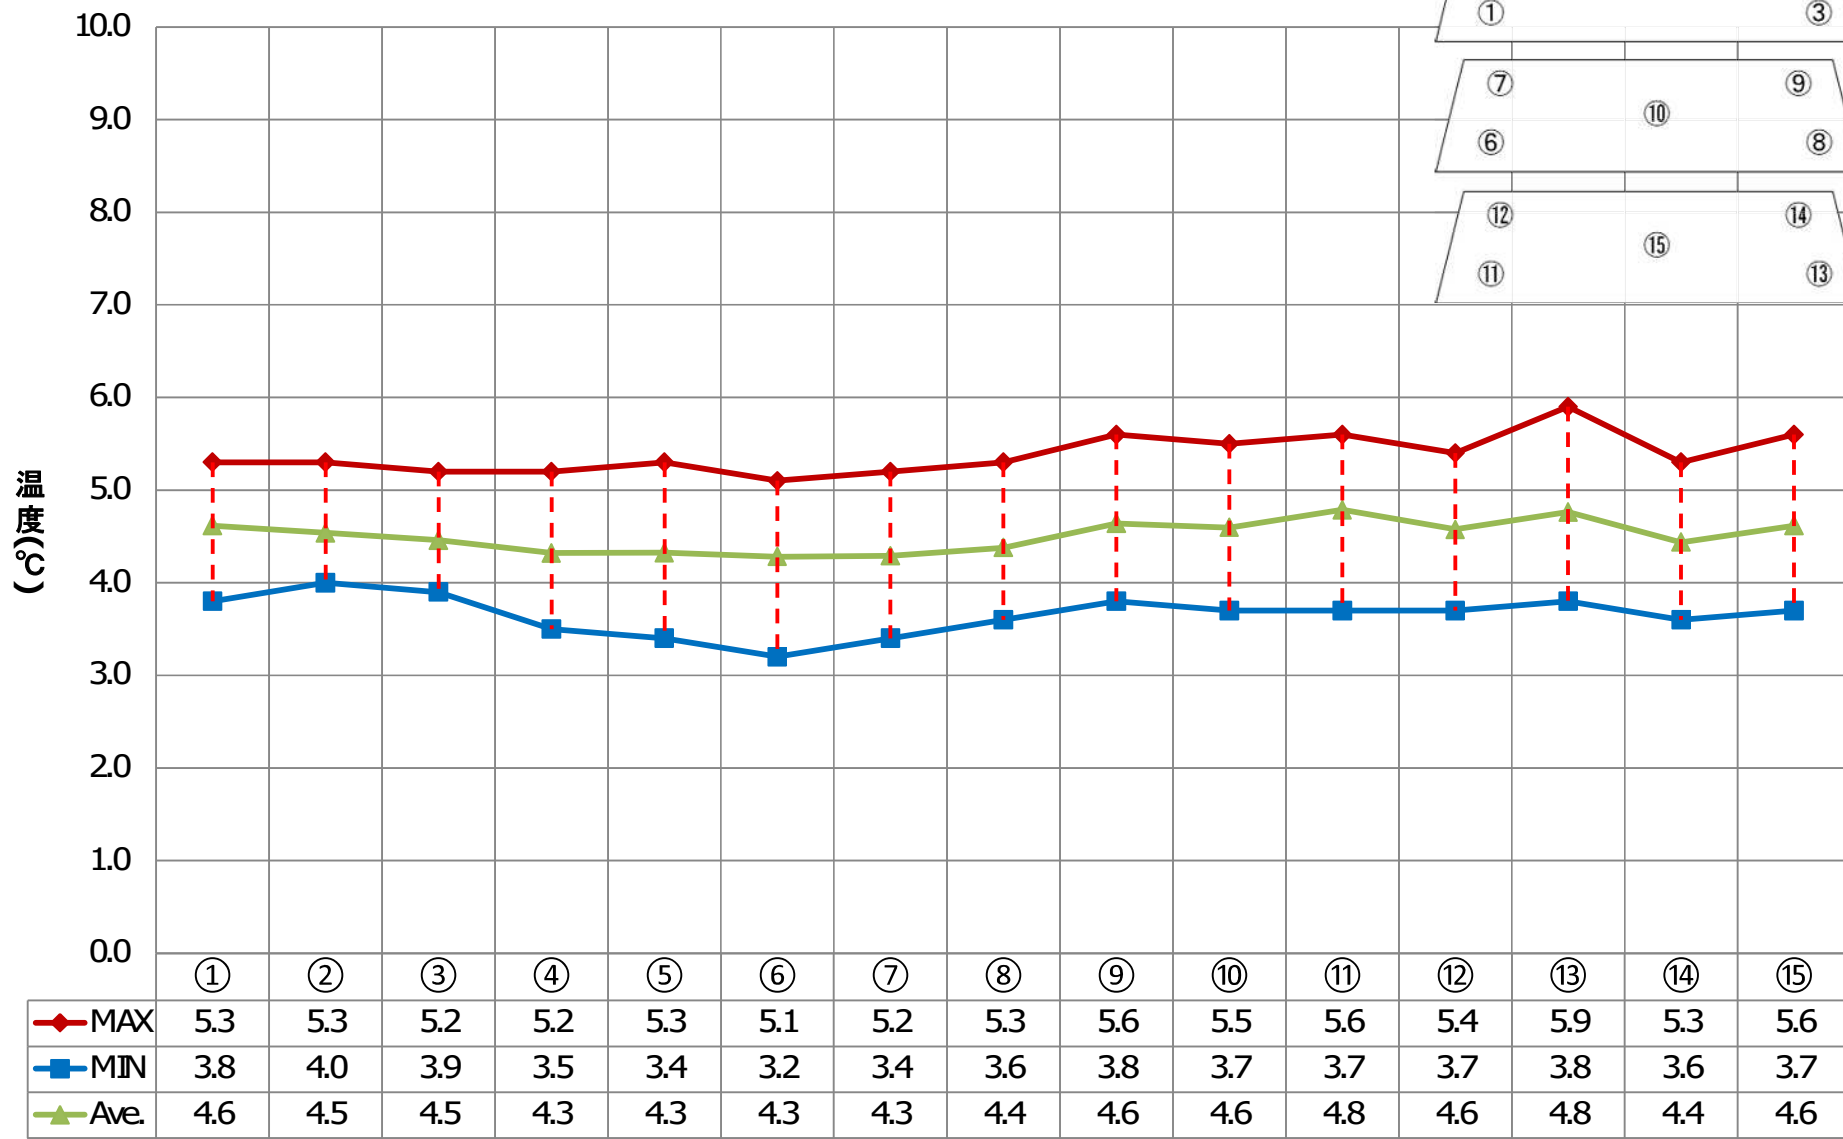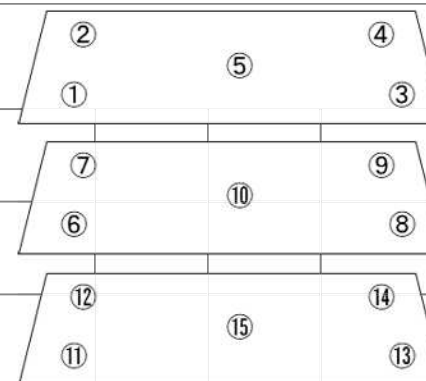


CH-178 HCFモード 設定5°C RT30RH60 無負荷

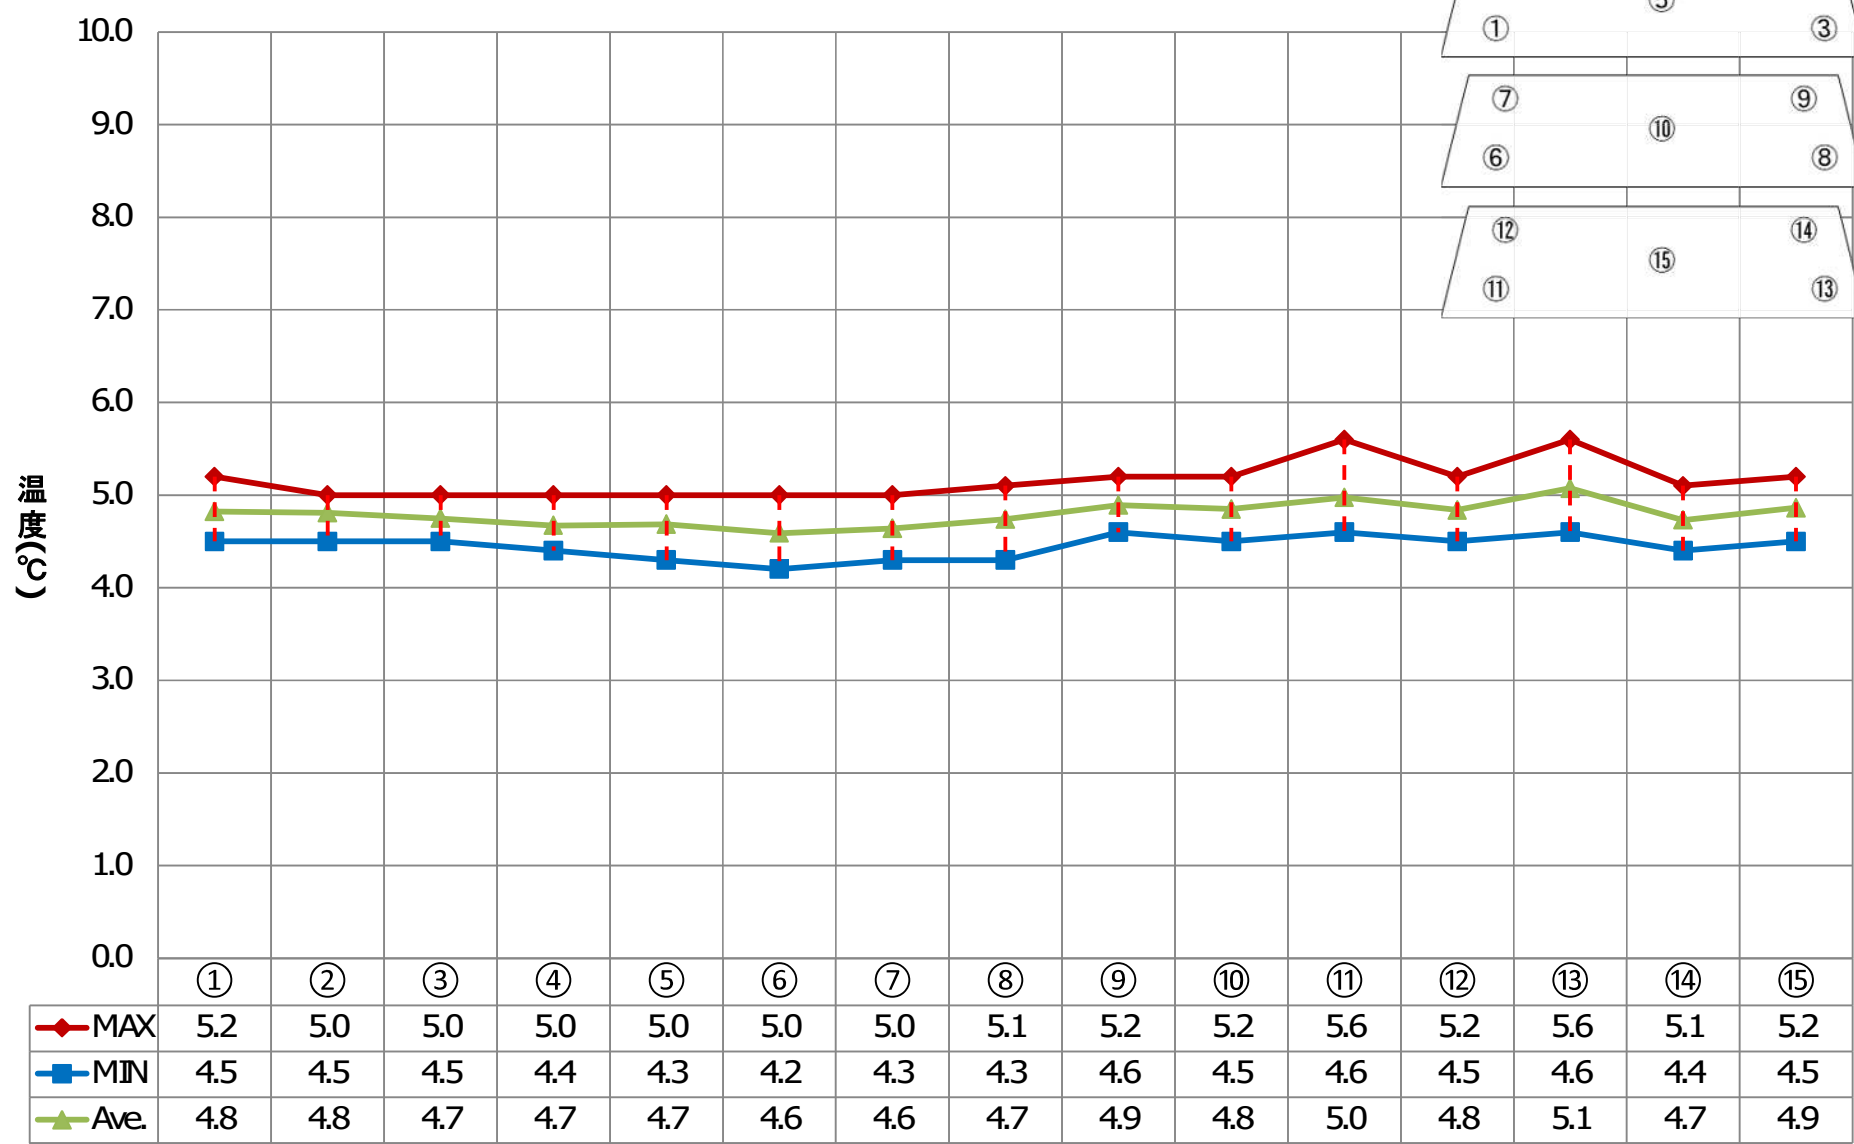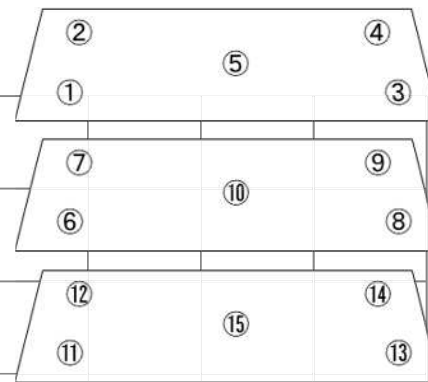



CH-178 Eモード 設定37°C RT30 RH60 無負荷

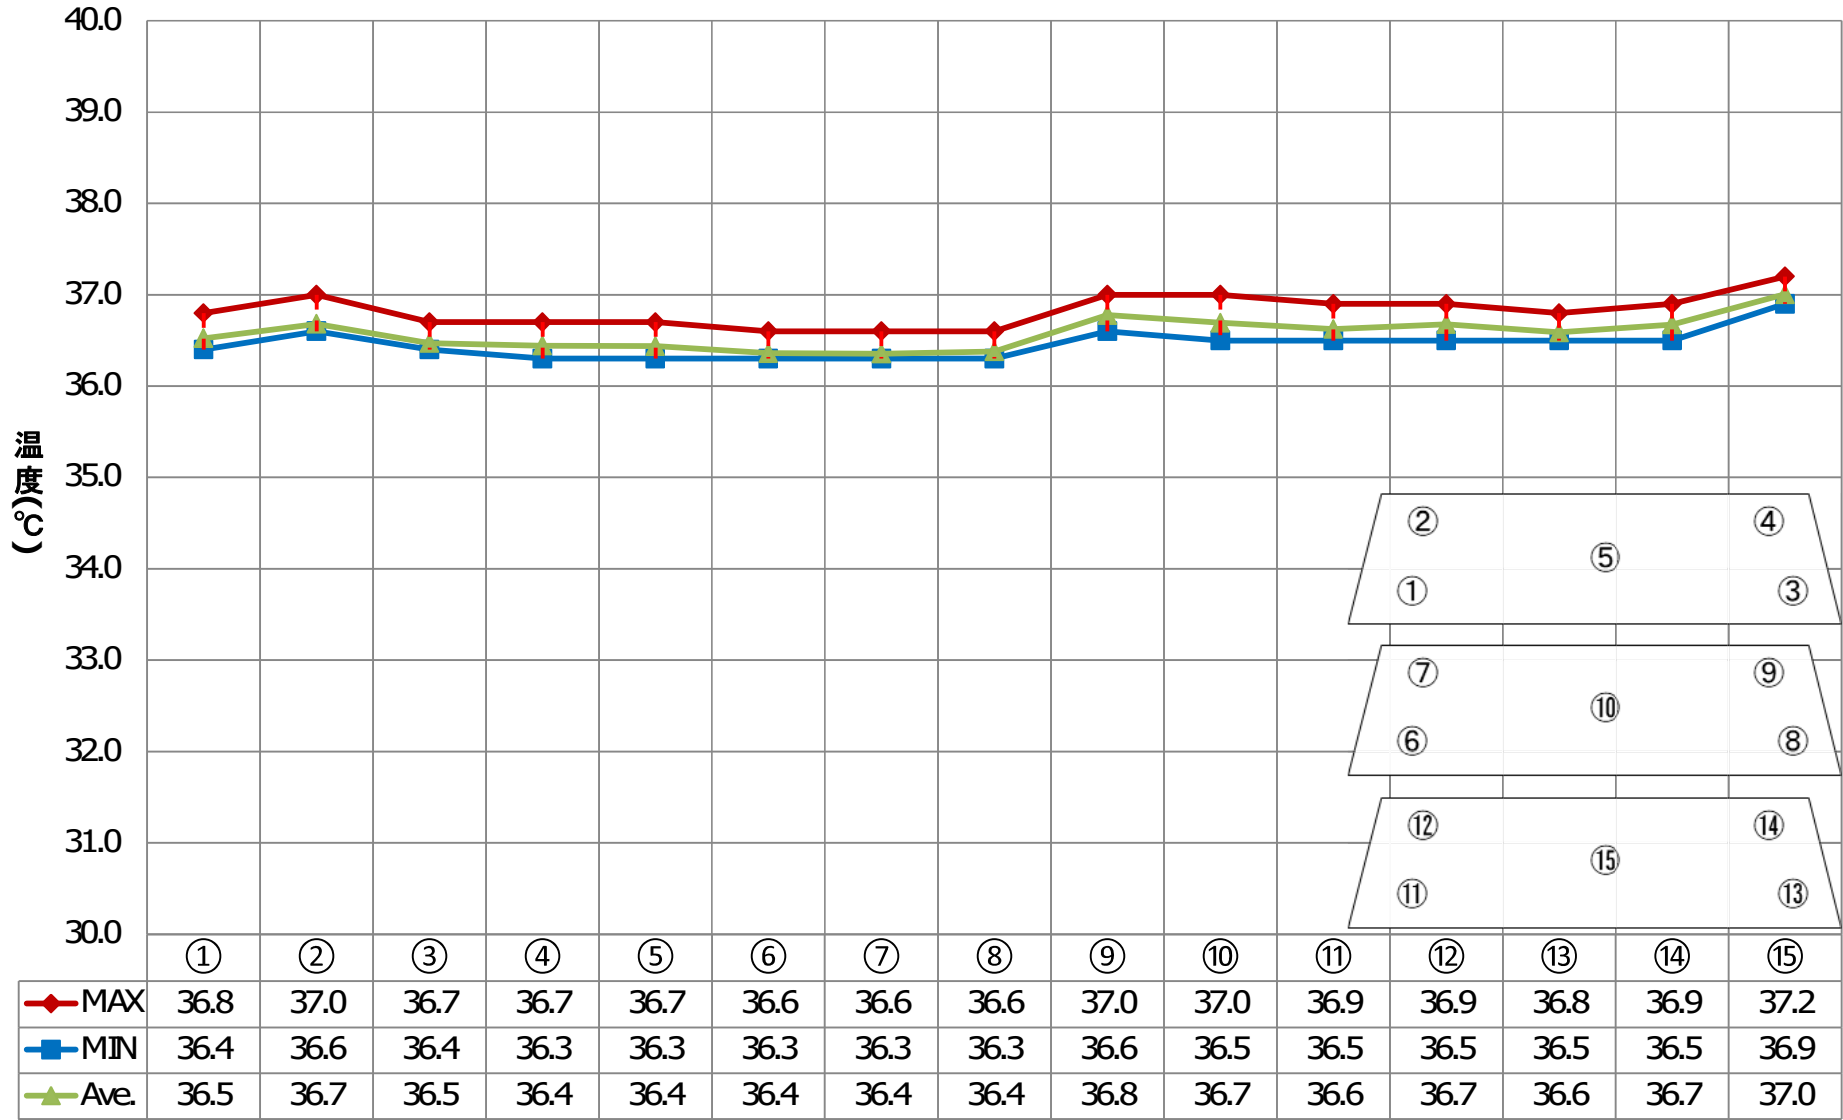



CH-178 HCEモード 設定37°C RT30 RH60 無負荷

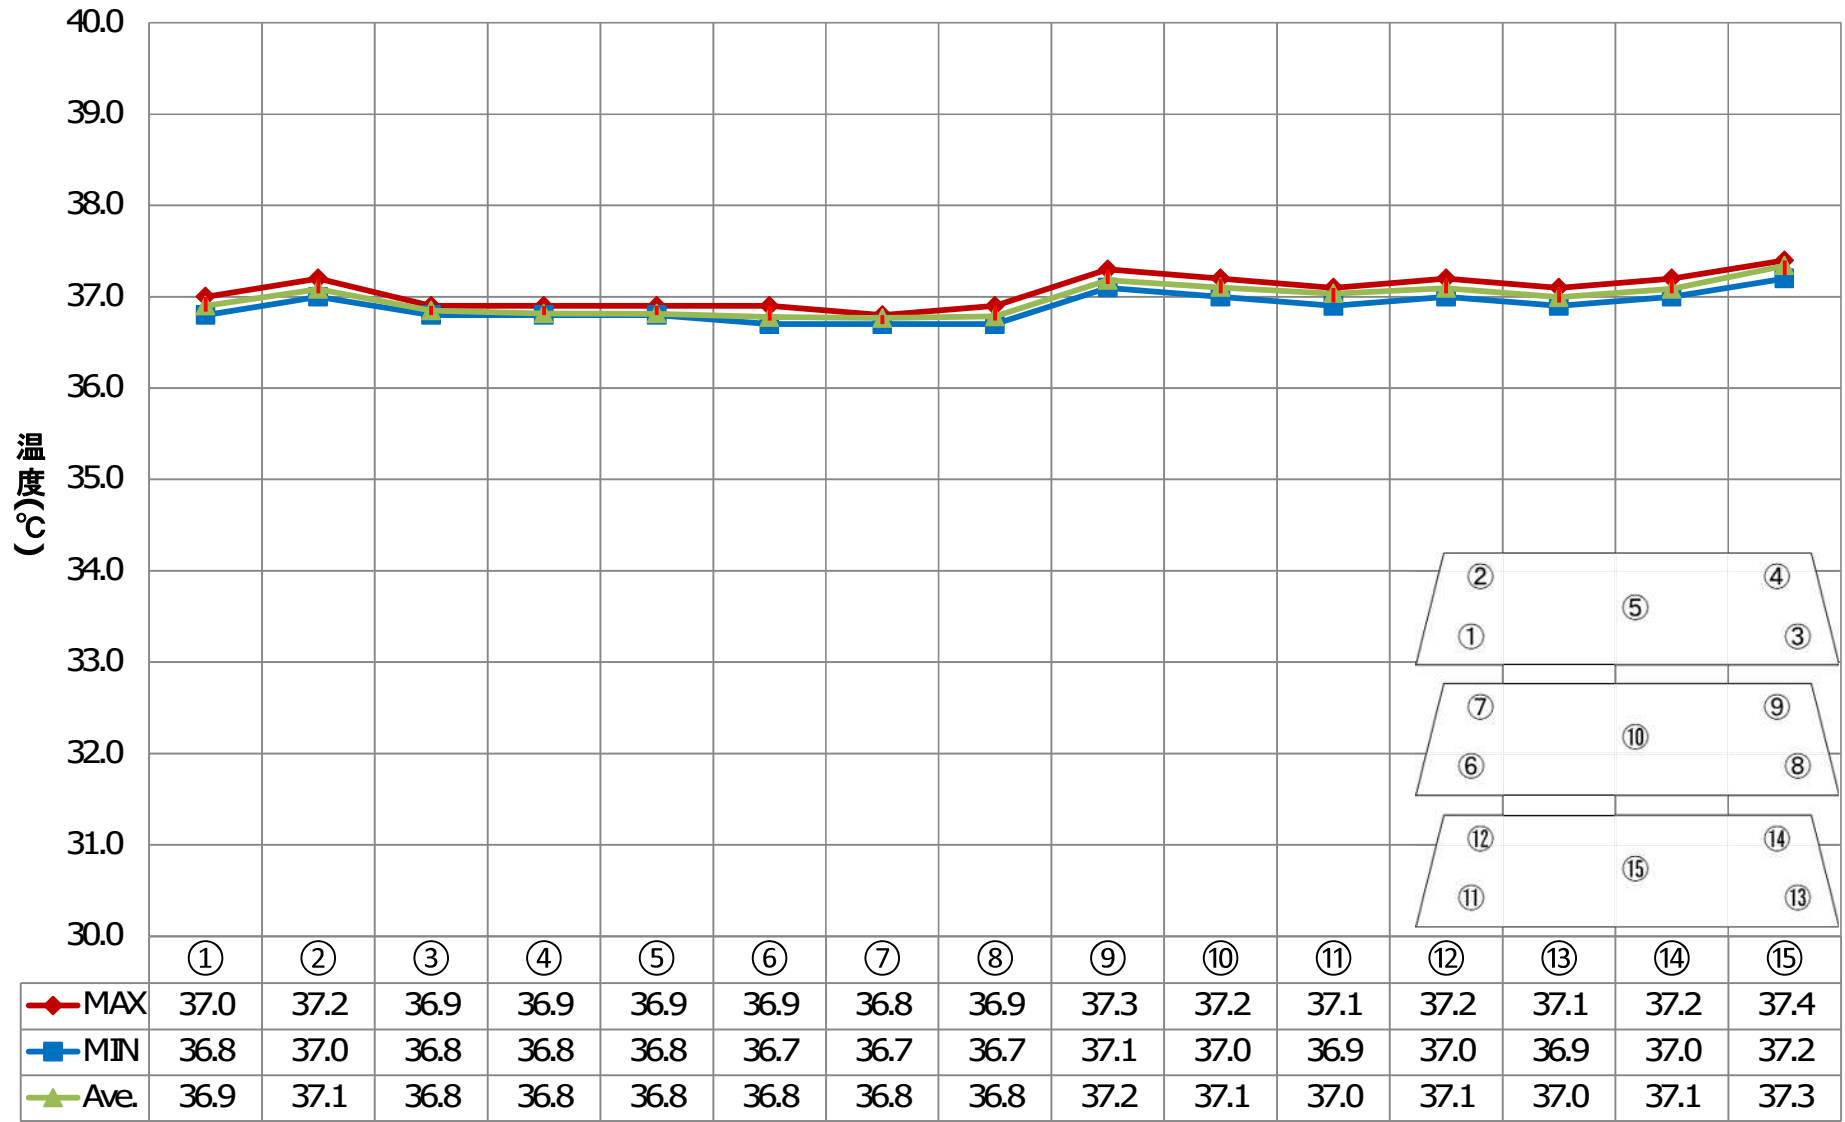


CH-230 EGEード 設定5°C RT30 RH60 無負荷

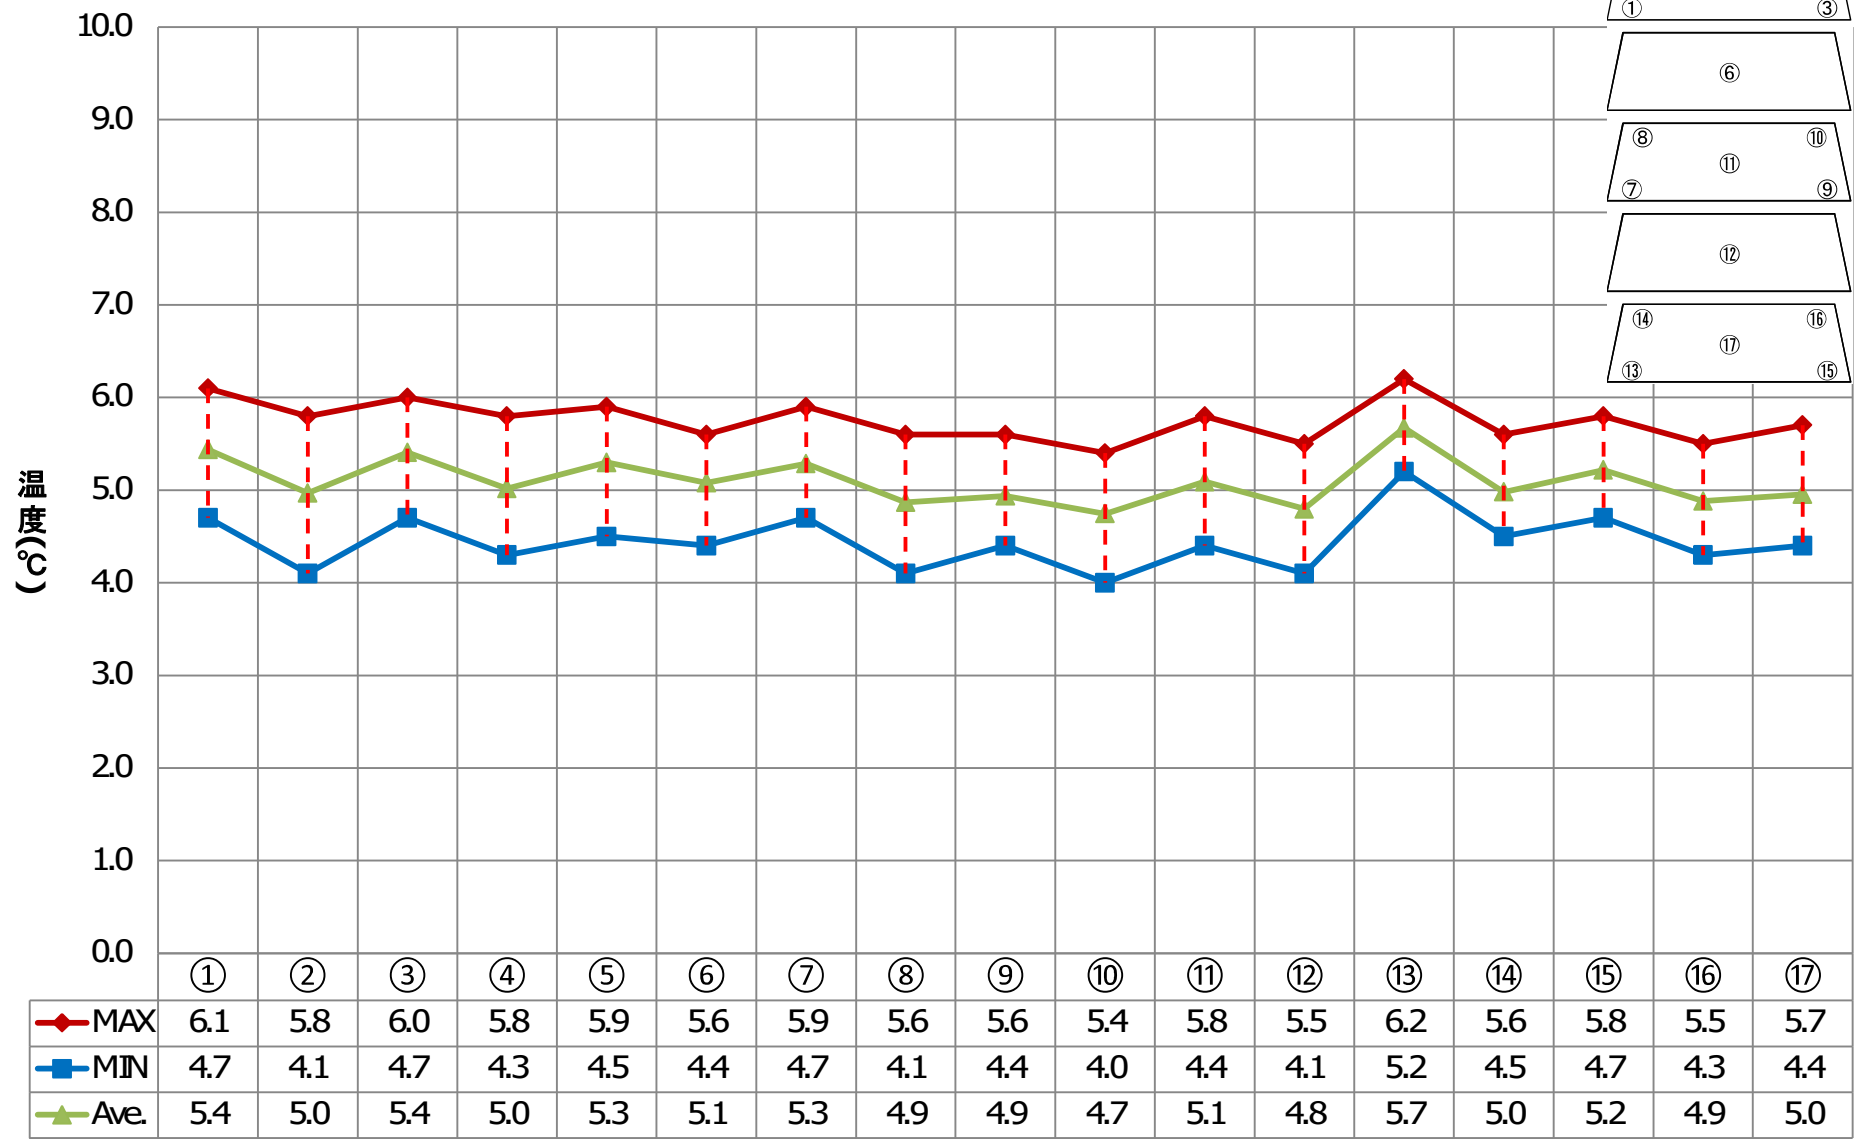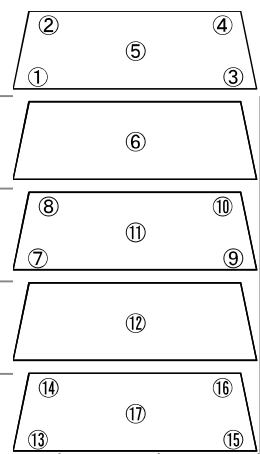


CH-230 HCFモード 設定5°C RT30RH60 無負荷

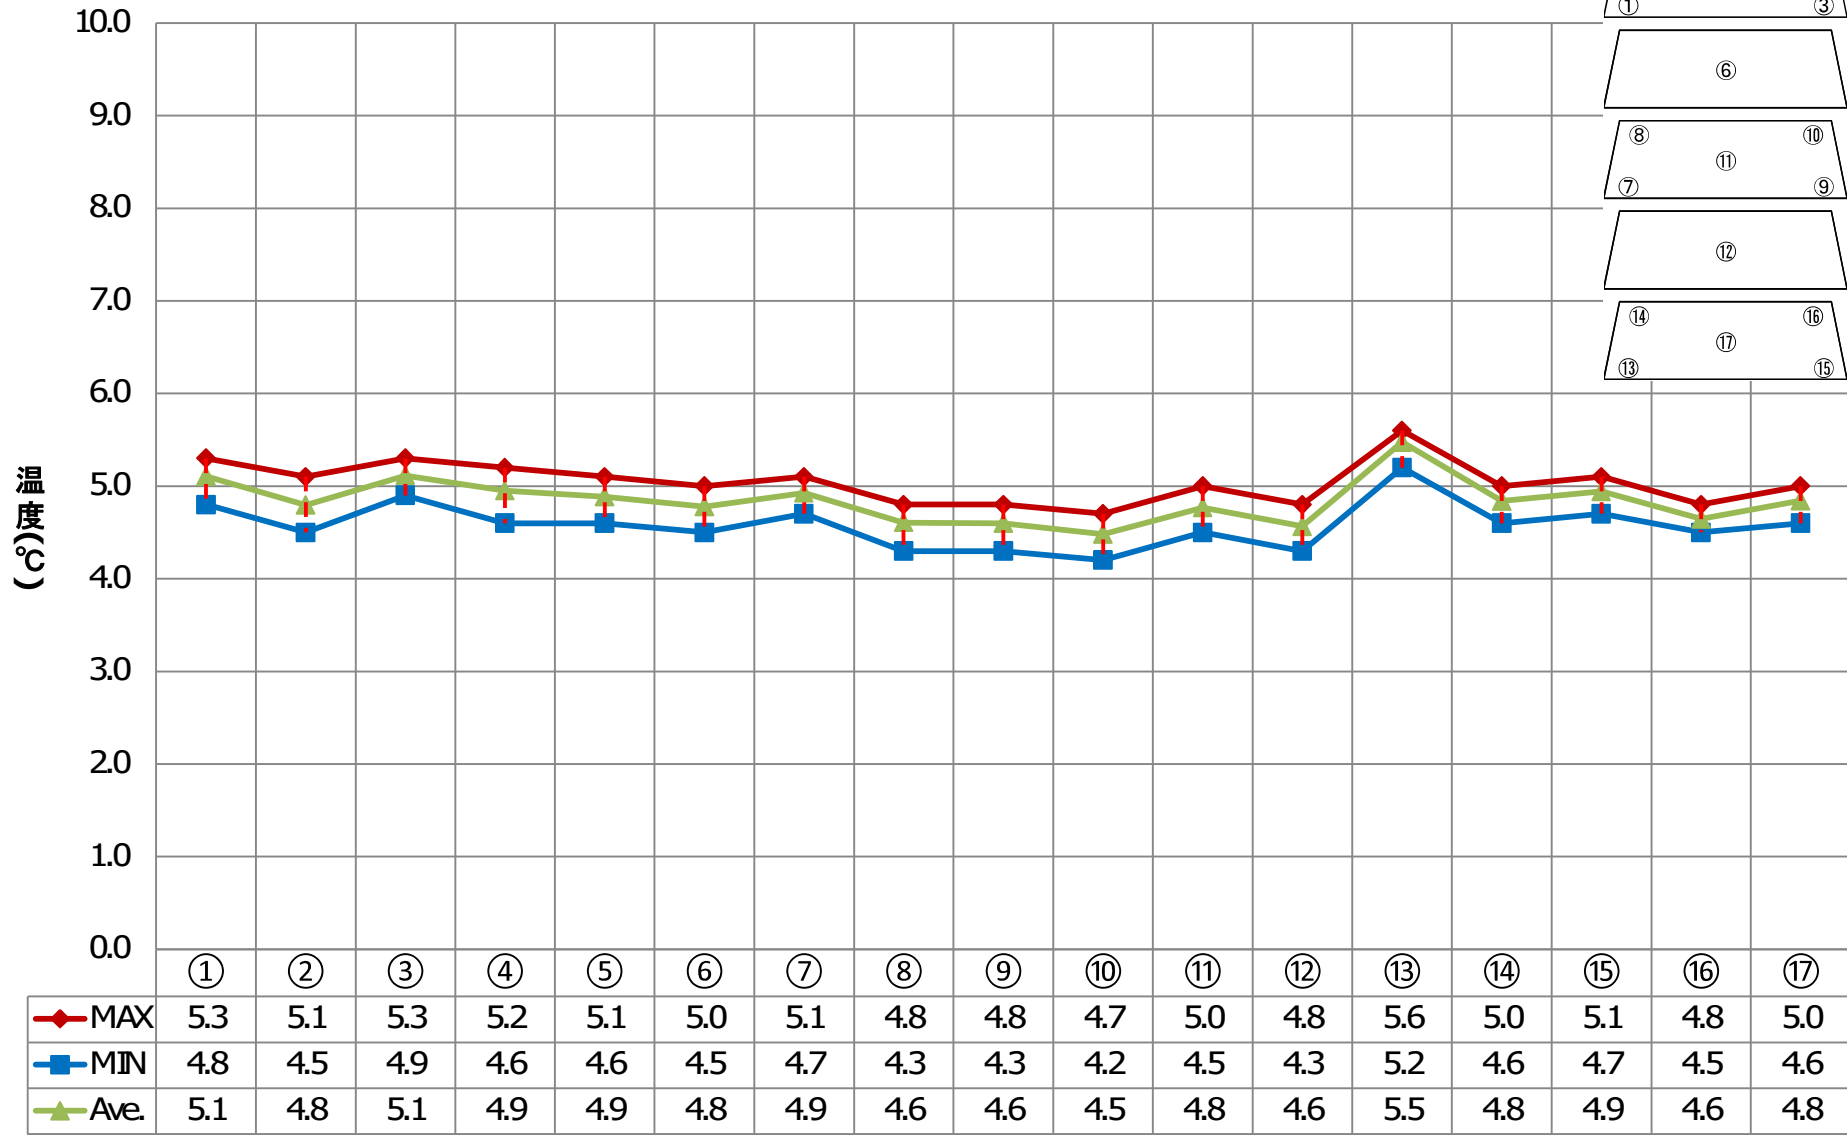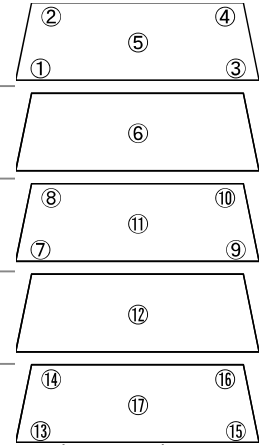



CH-230 ECモード 設定37°C RT30 RH60 無負荷

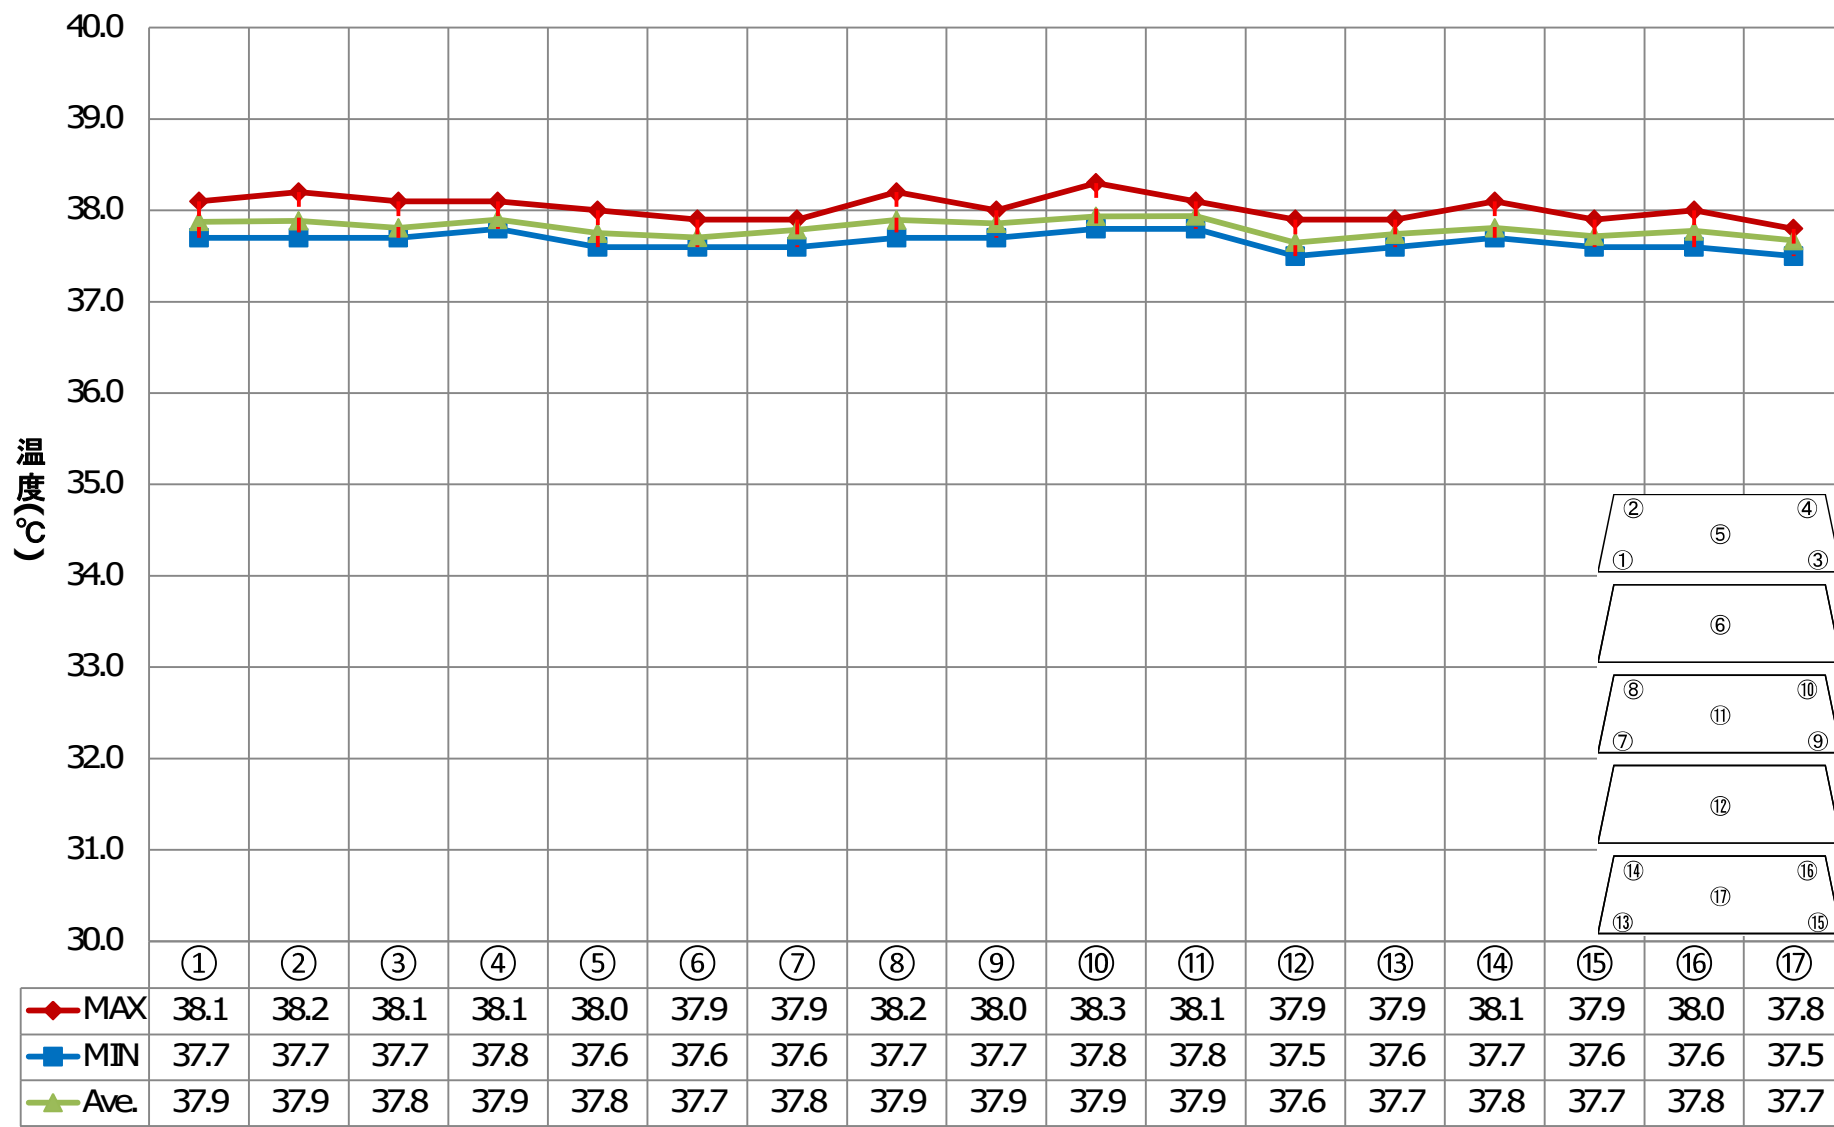

CH-230 HCFモード 設定37°C RT30 RH60 無負荷


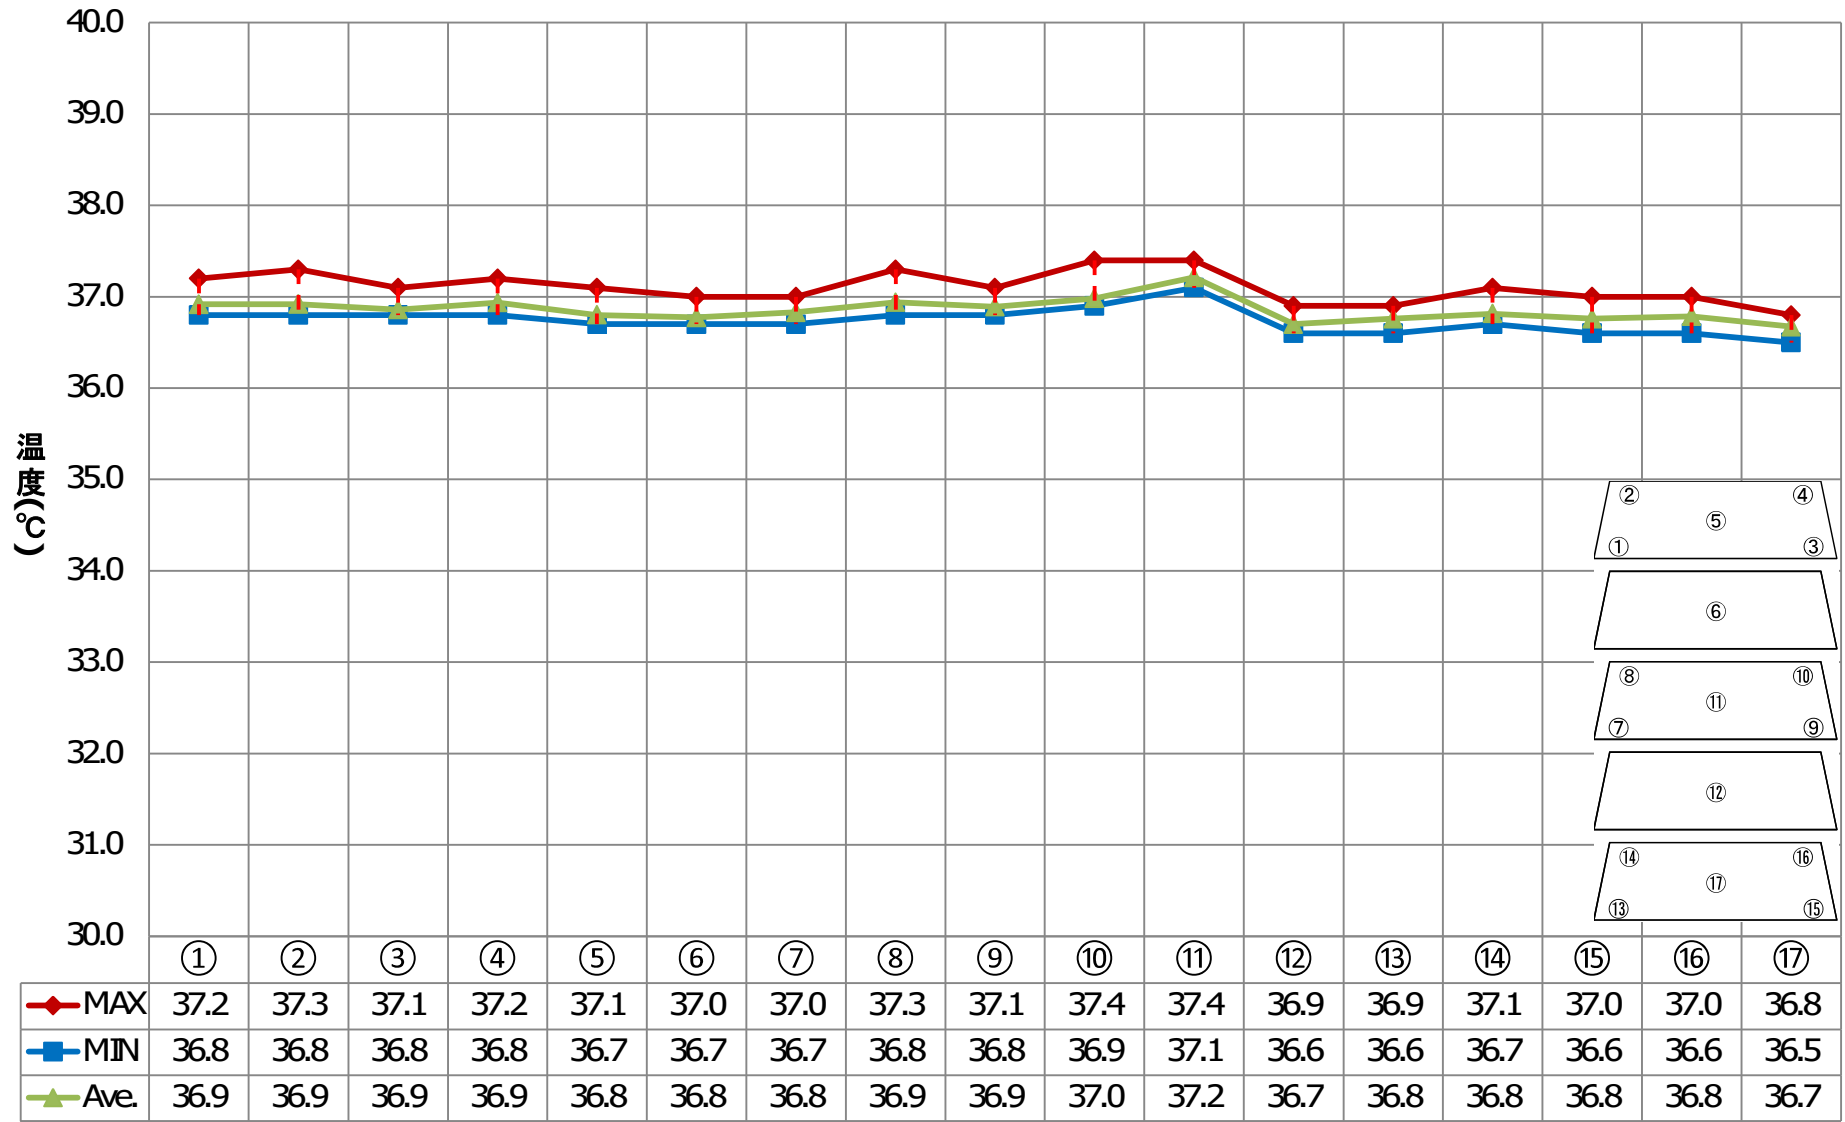


CH-383 EGEード 設定5°C RT30 RH60 無負荷

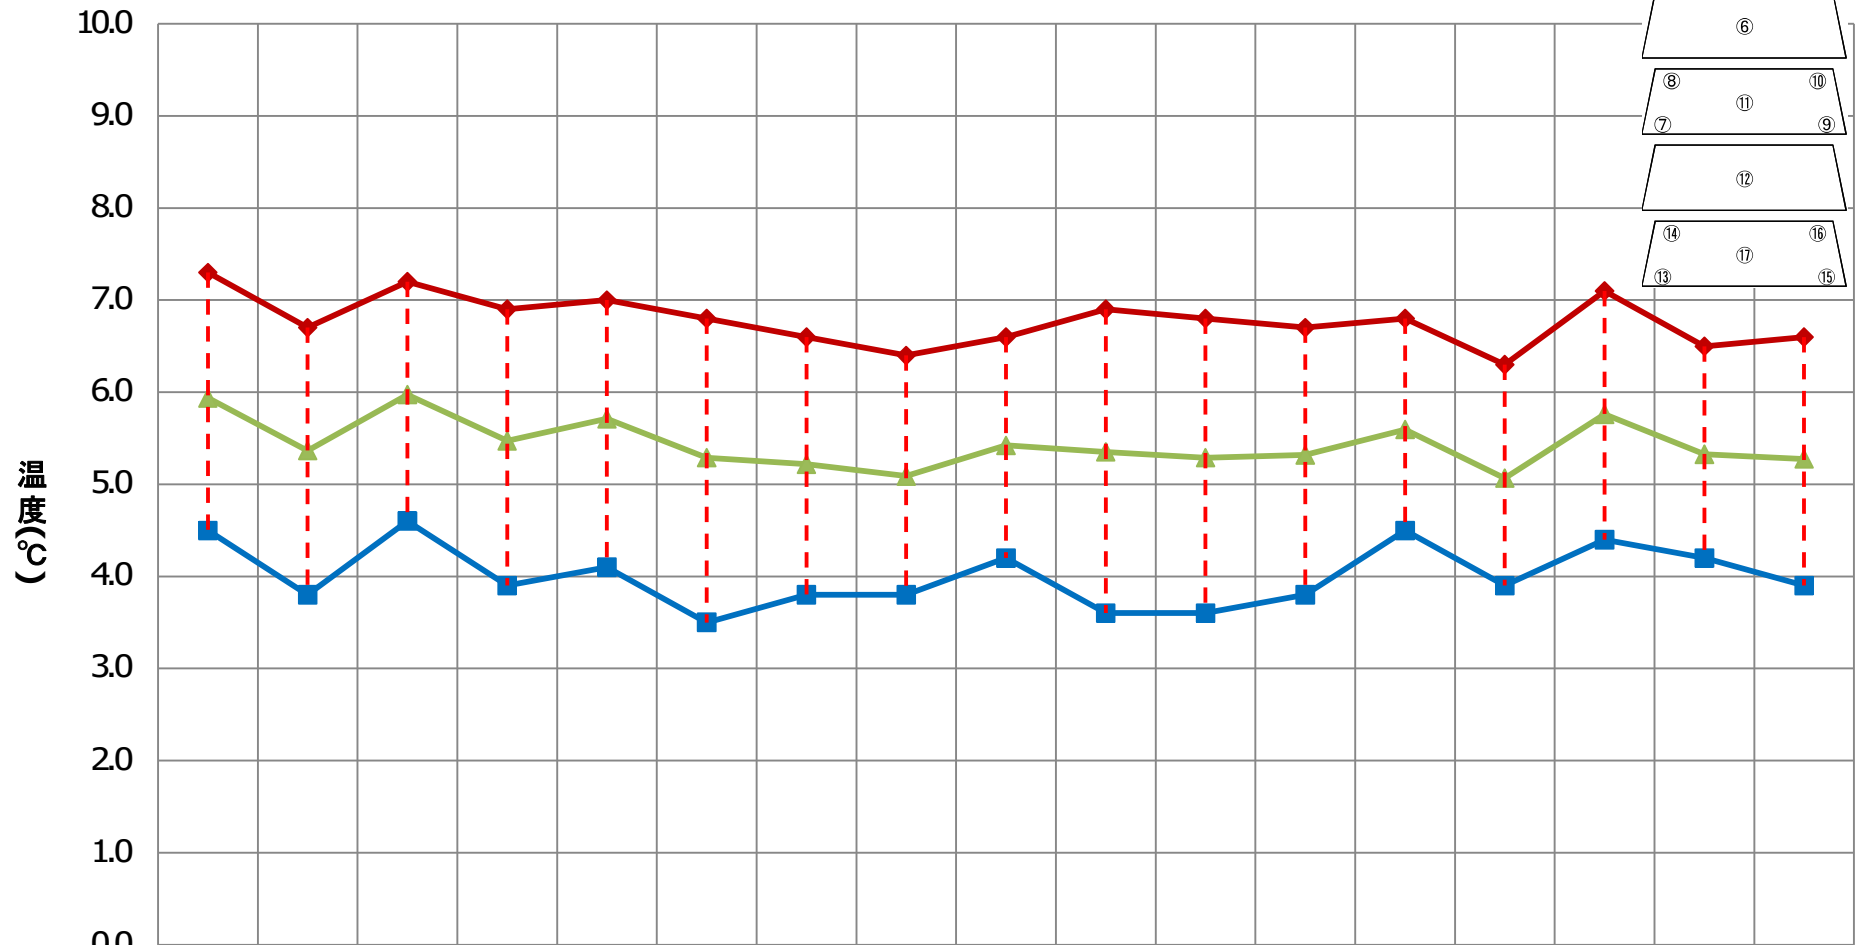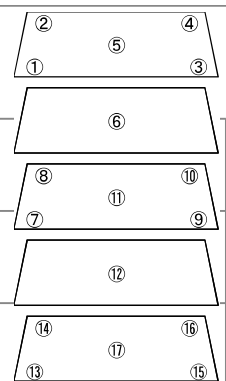


| | ① | ② | ③ | ④ | ⑤ | ⑥ | ⑦ | ⑧ | ⑨ | ⑩ | ⑪ | ⑫ | ⑬ | ⑭ | ⑮ | ⑯ | |
|-------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| ◆ MAX | 7.3 | 6.7 | 7.2 | 6.9 | 7.0 | 6.8 | 6.6 | 6.4 | 6.6 | 6.9 | 6.8 | 6.7 | 6.8 | 6.3 | 7.1 | 6.5 | 6.6 |
| ■ MIN | 4.5 | 3.8 | 4.6 | 3.9 | 4.1 | 3.5 | 3.8 | 3.8 | 4.2 | 3.6 | 3.6 | 3.8 | 4.5 | 3.9 | 4.4 | 4.2 | 3.9 |
| ▲ Ave | 5.9 | 5.4 | 6.0 | 5.5 | 5.7 | 5.3 | 5.2 | 5.1 | 5.4 | 5.4 | 5.3 | 5.3 | 5.6 | 5.1 | 5.8 | 5.3 | 5.3 |

CH-383 HCFモード 設定5°C RT30 RH60 無負荷

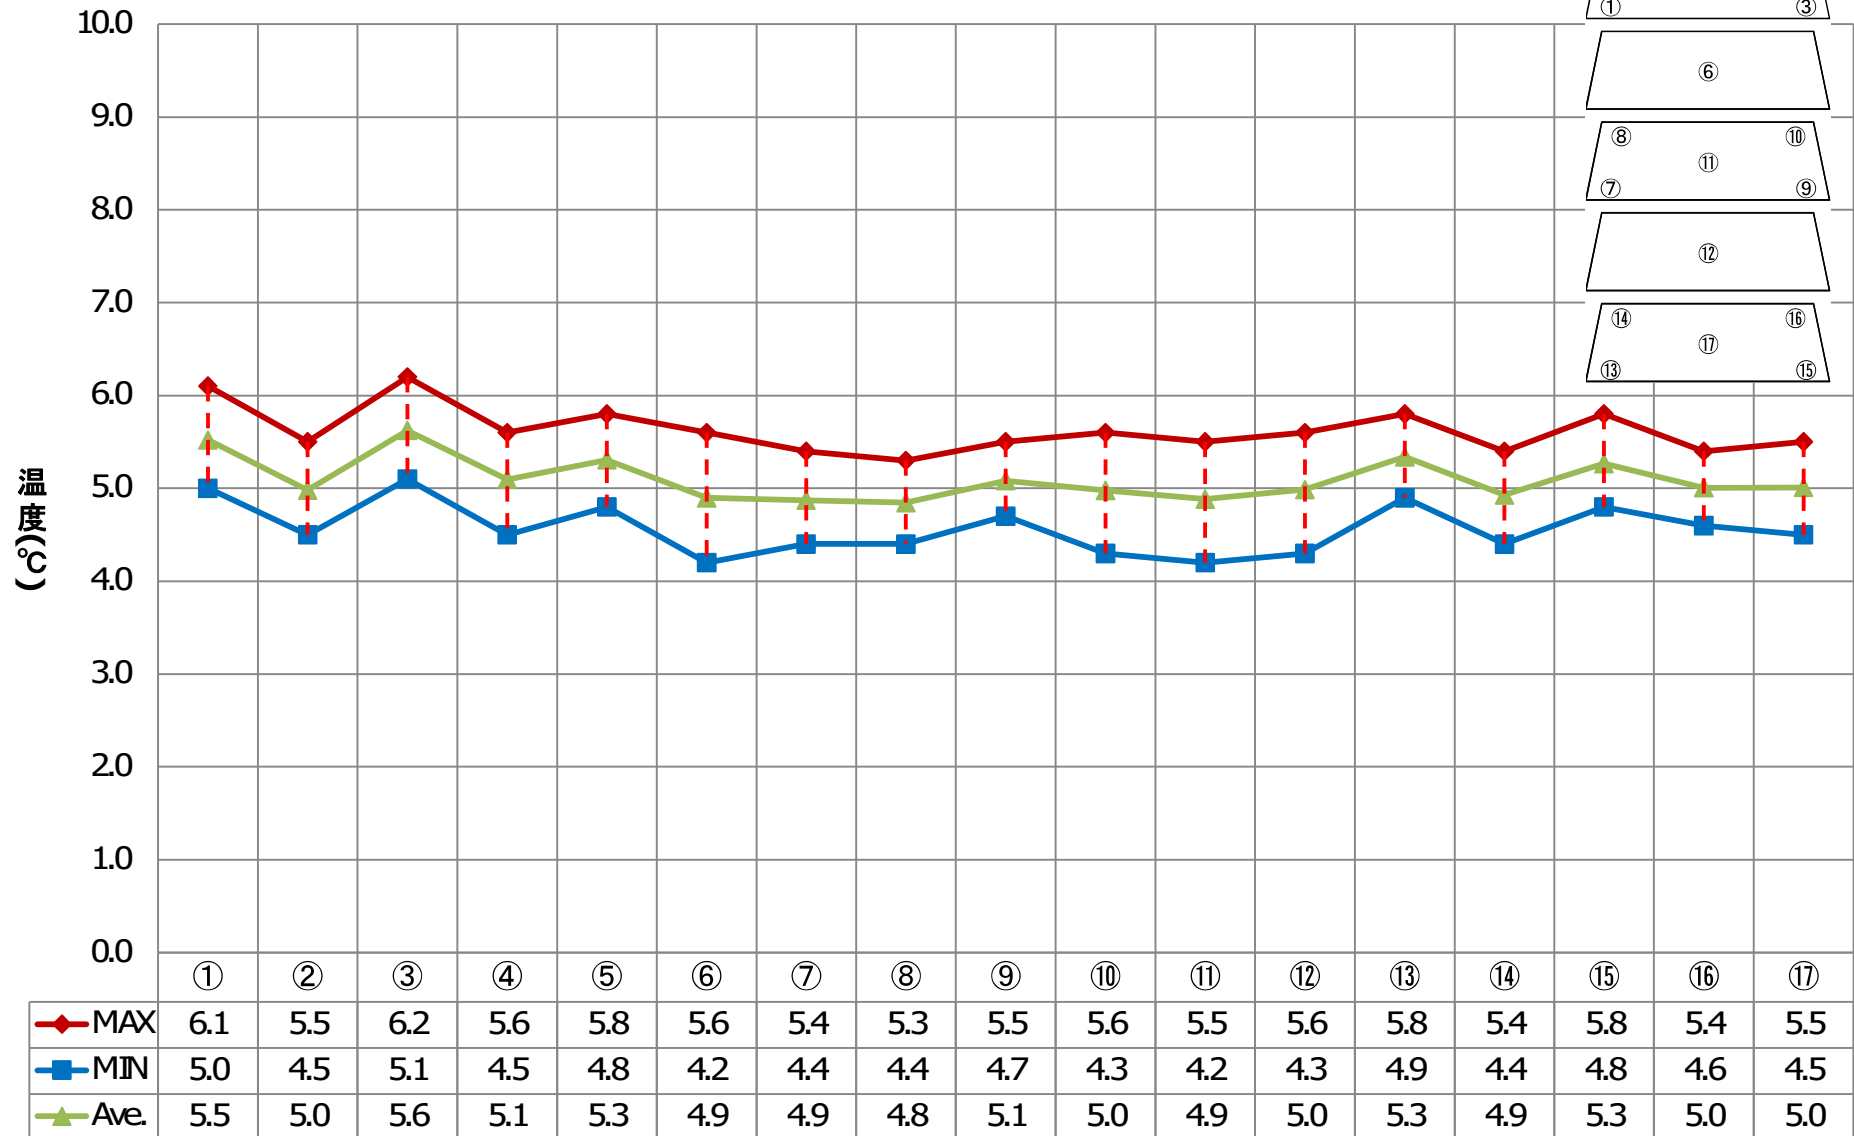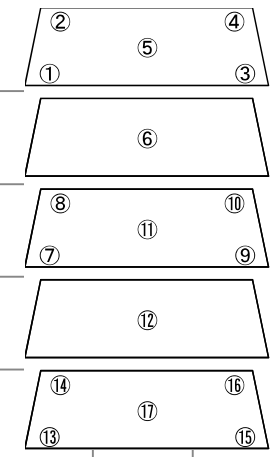

CH-383 Eモード 設定37°C RT30 RH60 無負荷

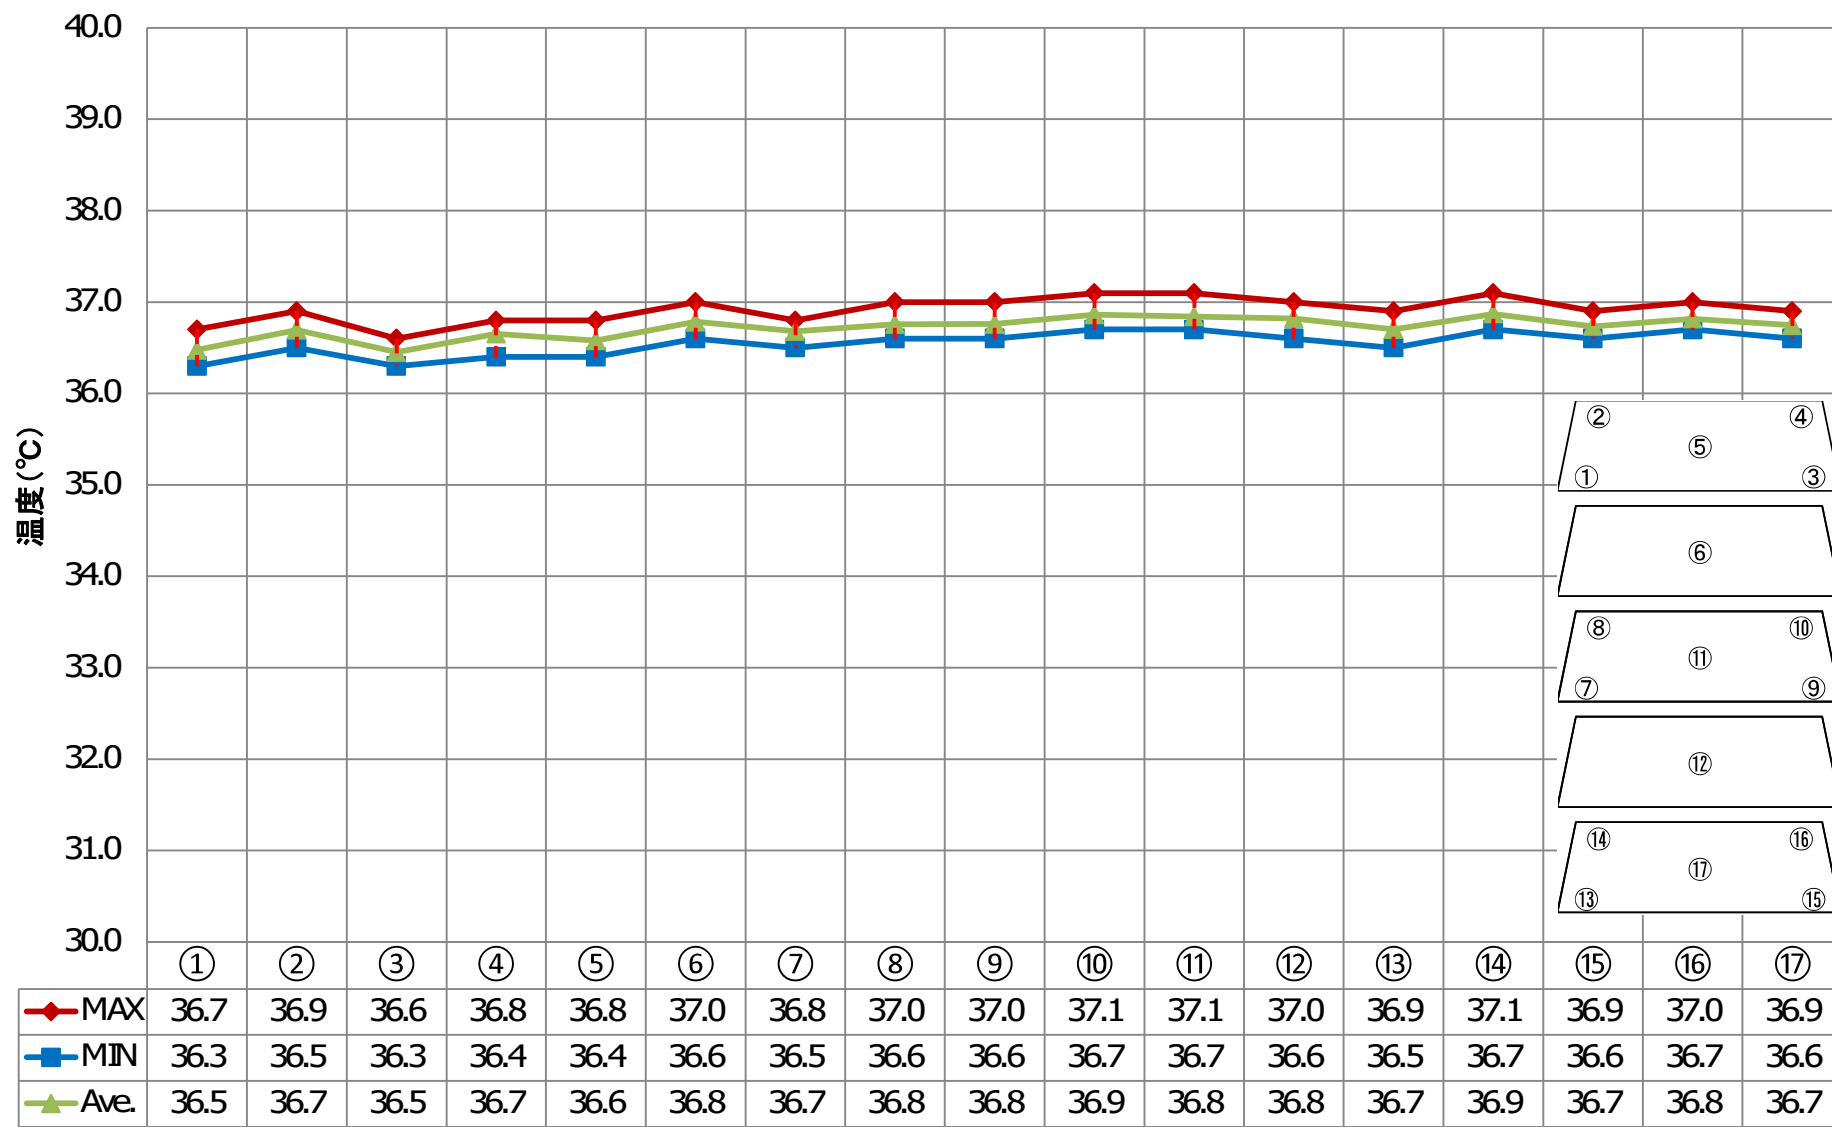

CH-383 HCFモード 設定37°C RT30 RH60 無負荷

