


blue  
by Blueair

空氣清淨機/  
Air Purifier

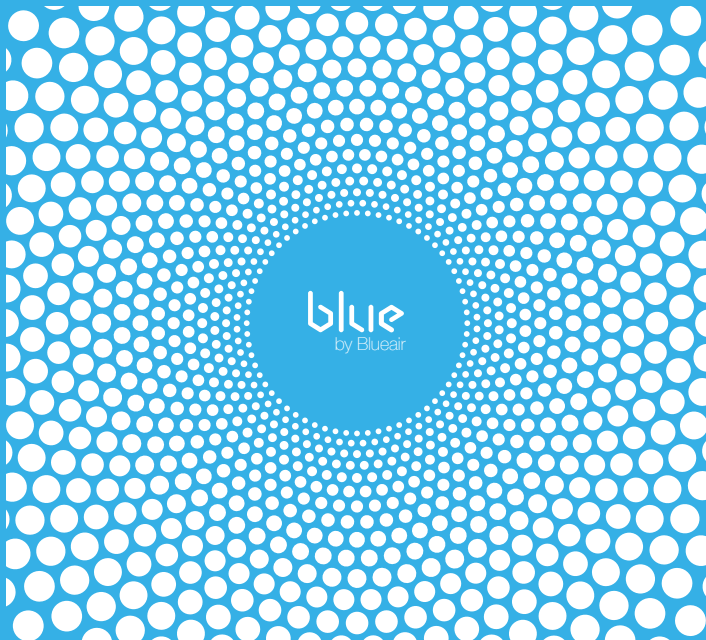

取扱説明書/User Manual

Blue  
PURE 411

# Blue PURE 411

## 取扱説明書

モデル: Pure411

ご使用になる前には必ず本書をお読みください。また、お読みになったあとは大切に保管してください。

04 - 23

安全上のご注意	04
各部の名称	10
同梱物・オプション品	12
使用上の注意	13
設置する・初めて使うとき	14
電源のオン/オフと風量設定	15
フィルターについて	16
お手入れについて	21
アフターサービス	22
仕様	23

## 安全上のご注意

本製品は安全を十分に考慮して設計されていますが、一般に電気製品は取り扱いを誤ると大きな事故につながる場合があります。次の注意事項をお守りになり、安全にご使用ください。



### 警告

次の警告事項を必ずお守りください。警告を守らずに使用した場合、火災や感電などにより使用者の死亡や大けがを伴う事故につながる場合があります。



**煙が出る、変な臭いをするなどの異常および故障時には、ただちに使用を中止する**

### 指示

そのまま使い続けると、発火や感電の原因になります。異常を感じた場合は、すぐに差込プラグを電源コンセントから抜き、「ブルーエアサービスタ」へご連絡ください。



**差込プラグを電源コンセントに差し込むときは、まっすぐに突き当たるまで差し込む**

### 指示

差込プラグが外れかけたまま使用すると、感電や火災の原因になります。



**交流100Vで使用する**

### 指示

本製品は日本国内用です。交流100V以外で使用すると火災の原因になります。



**差込プラグと電源コンセントの接続部分は、ホコリなどを定期的に除去する**

### 指示

差込プラグにホコリがたまると、湿気などによる絶縁不良が起り、感電や火災の原因になります。



### 指示

**電源コンセントから差込プラグを抜くときはコードを引っ張らず、必ずプラグを持って抜く**

コードを引っ張ると、コードの中の電線が切れ、ショートによる感電や火災の原因になります。



### 指示

**幼児の手が届かないように設置する**

小さなお子様が誤って指などを挟み、けがや感電の原因になります。



### 指示

**子どもが本製品で遊ばないように注意する**

けがや事故の原因になります。



### 指示

**水分（ペットの尿や加湿器からの水蒸気など）がかからない場所に設置する**

火災や感電の原因になる場合があります。また、ペットの尿や加湿器からの水蒸気などがかからないようご注意ください。



### 分解禁止

**自分で本製品を分解や改造、修理しない**

製品内部には電圧の高い部分があります。感電や火災の原因になりますので、分解や改造、修理をしないでください。



### 濡れ手禁止

**濡れた手で差込プラグをさわらない**

濡れた手で差込プラグを抜き差しすると、感電の原因になります。



### 禁止

**運転中に電源コンセントから差込プラグを抜かない**

火災や感電の原因になります。

**電源コードや差込プラグを熱器具に近づけない**

感電や火災の原因になります。

禁止

**電源タップや延長コードを使った「たこ足配線」で、定格を超えた接続をしない**

電源コードや差込プラグの負荷が大きくなり、感電や火災の原因になります。

禁止

**本体に水をかけない**

火災や感電の原因になる場合があります。

禁止

**吸込口・吹出口や本体のすき間に指や金属物などの異物を入れない**

感電やけが、故障の原因になります。

禁止

**油や可燃性ガスなどを使用する場所、漏れるおそれのある場所に設置しない**

引火や、ガス吸引による発火や発煙の原因になります。

禁止

**次のような可燃性の高いものを本体に近づけない**

・ヘアスプレーや殺虫剤など ・火のついたタバコや線香など

・ベンジンやシンナーなど

引火や感電の原因になります。

禁止

**塩素系や酸性の洗剤を使ってお手入れをしない**

洗剤からの有毒ガスによって健康を害する場合があります。

禁止

**電源コードが破損した場合は、そのまま放置したり自分で修理したりしない**

破損した状態のまま使用し続けると、感電や火災、ショートの原因になります。すぐに差込プラグを電源コンセントから抜き、「ブルーエアサービスセンター」へご連絡ください。

禁止

**子どもや、知覚・精神障害がある方、経験や知識が不足している方は、安全に使用するための注意や説明を受けることなしに使用しない**

けがや事故の原因になります。

禁止

**長い間使用しない場合は、差込プラグを電源コンセントから抜いておく**差込プラグにホコリがたまると、湿気などによる絶縁不良が起こり、感電や火災の原因になります。  
プラグをコンセントから抜く**フィルター交換やお手入れ、点検、本体移動の場合は、運転を停止し電源を抜く**電源が入ったまま行くと、感電やけがの原因になる場合があります。  
プラグをコンセントから抜く**注意**

次の注意事項を必ずお守りください。注意を守らずに使用した場合、使用者のけがや周辺の物品損害を伴う事故につながる可能性があります。

**壁などから10cm以上離して設置する**

空気の流れが悪くなり、発熱や発火の原因になります。

指示



**安定した水平な床面に設置する**

本製品は床置き専用です。壁にかけたり、棚に置いたりはできません。万一、本製品が転倒すると、けがや家財破損の原因になります。

指示



**浴室など高温多湿、水のかかる場所に設置しない**

火災や感電の原因になる場合があります。

禁止



**動植物に直接風が当たる場所に設置しない**

動植物に長時間風が当たり、乾燥する原因になります。

禁止



**カーテンや洗濯物で吸込口や吹出口を塞がない**

発熱や発火の原因になります。

禁止



**発煙ないしは霧タイプの殺虫剤使用時には運転しない**

本体内部に蓄積した薬剤成分が、再運転後に吹出口から放出され、健康を害する場合があります。殺虫剤の使用後は、十分に換気を行ってからご使用ください。

禁止



**上に乗ったり、寄りかかったり、横倒して使ったりしない**

転倒によるけがや故障の原因になります。

禁止



**移動するときは、本体から外れる部分を持たない**

落下によるけがや故障の原因になります。


禁止



**燃焼器具と一緒に使う場合は必ず換気する**

本製品は換気ができません。そのため、燃焼器具から発生する一酸化炭素による中毒の原因になる場合があります。


禁止

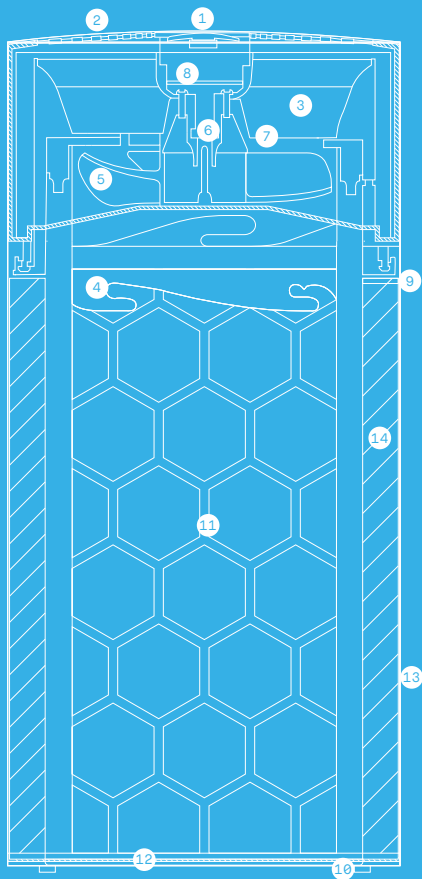


## 各部の名前

- ① 操作ボタン
- ② 吹出口
- ③ イオンチャンバー（イオナイザー稼動部）
- ④ 回転式差込ロック
- ⑤ ファン
- ⑥ モーター
- ⑦ ファンホルダー
- ⑧ 基板
- ⑨ フィルターカバー
- ⑩ 円形ゴム足
- ⑪ 本体内部
- ⑫ ボトムプレート
- ⑬ ファブリックプレフィルター
- ⑭ メインフィルター

## Pure 411 同梱物

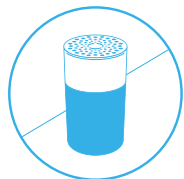

Pure 411空気清浄機

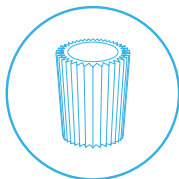メインフィルター  
(本体に装着)ファブリックプレフィルター  
(本体に装着)

- 取扱説明書：1部
- 保証書：1部

## オプション品

- パーティクルアンドカーボンフィルター
- ファブリックプレフィルター

## 使用上の注意

- **操作ボタンのLEDが赤く点灯したら、メインフィルターを交換する**  
交換をしないと集じん効果が得られないばかりか故障の原因になります。交換の目安は約6ヶ月です。詳しくは「フィルターについて」をご確認ください。
- **Pure 411空気清浄機純正の付属品やフィルターを使用する**  
純正の付属品やフィルターを使用しないと故障の原因になります。純正以外の付属品やフィルターを使用して生じた故障は保証の対象外です。
- **メインフィルターは水洗いしない**  
集じん効果が低下します。
- **熱器具（暖房器具など）、熱い物の近くで使用しない**  
変色の原因になります。
- **使用中は窓や扉を閉めて使用する**
- **直射日光が当たる場所で使用しない**  
変色の原因になります。

## 設置する


Pure 411は安定した水平な床面に直立させた状態で設置します。人やペットが当たって倒れないような場所に置いてください。

Pure 411は屋内使用専用です。屋外ではご使用にならないでください。


### 寝室で使用する場合

5秒後にライトが自動的に薄暗くなります。

## 初めて使うとき

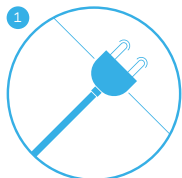


Pure 411空気清浄機の電源コードの差し込みプラグを電源コンセントに差し込みます。

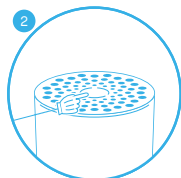


天面の操作ボタンを押して本体の電源を入れます。操作ボタンを押すことで、運転スピードの切り替えを行うことができます。（「電源のオン/オフと風量設定」を参照）


## 電源のオン/オフと風量設定

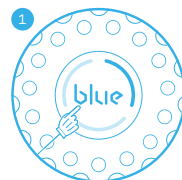


**オン/低速（スピード1）**  
操作ボタンを1回押すと、本体の電源が入り、低速（スピード1）で稼働します。

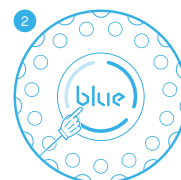

**中速（スピード2）**  
ボタンを2回押すと中速（スピード2）で稼働します。

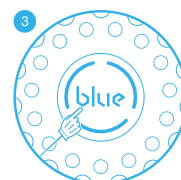

**高速（スピード3）**  
ボタンを3回押すと、高速（スピード3）で稼働します。

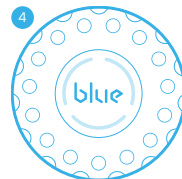

**オフ**  
4回押すと本体の電源が切れます。

運転スピードによって、LEDの点灯本数が変わります。

Pure 411は、稼働中にコンセントからプラグを抜いた場合や停電などで電源が切れた場合に、稼働を再開させた時は電源が切れる前に設定されていたスピードで稼働し始めます。



# フィルターについて

## メインフィルター

メインフィルターは、「パーティクルフィルター（日本未発売）」および「パーティクルアンドカーボンフィルター」の2種類があります

パーティクルフィルターが除去するもの：



PM2.5\*



ほこり



花粉



ペットのダニ



カビ



ダニ



バクテリア

パーティクルアンドカーボンフィルターが除去するもの（上記に加えて）：



VOC



タバコ煙




化学物質




調理臭

\*2.5ミクロン以下の微小な粒子状の物質

## メインフィルター交換お知らせ機能

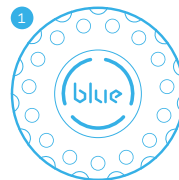

**フィルター交換時期のお知らせ**  
LEDが赤色に点灯したら（使用開始から6ヶ月後）、メインフィルターを交換してください。

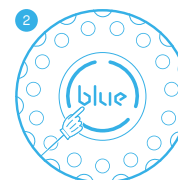

**フィルター交換タイマーのリセット**  
フィルター交換タイマーをリセットするには、電源を入れ、操作ボタンを5秒間長押しします。

**注意!**正しく使用するためにも、また機能を十分に発揮するためにもピュア411空気清浄機純正のフィルターを使用してください。

# お手入れについて


空気清浄機能を最大限に発揮するためにも、定期的なお手入れとフィルター交換を行ってください。

- プレフィルターが汚れたら、掃除機で汚れを取り除くか、やさしく洗うコースで洗濯してください。お湯で洗う場合は低温で洗ってください。
- 稼動状況にもよりますが、メインフィルターは6か月ごとに交換してください。
- フィルター交換の際に、掃除機などで内部にたまっているほこりを取り除いてください。
- 天面が汚れたら乾いた布で拭いてください。
- お手入れ・フィルター交換を始める前には、必ず差し込みプラグを電源コンセントから抜いてください。


## プレフィルターのお手入れ

汚れが気になるときは、ファブリックプレフィルターに掃除機をかけてほこりを取り除いてください

ファブリックプレフィルターを取り外す際は取り外す前に、電源プラグをコンセントから抜いてください。

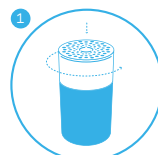


上部を下方方向にゆっくりと押しながらか時計回りに回し、本体内部の差込ロックを解除します。

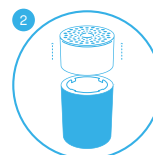

本体の上部を取り外します。




本体からプレフィルターを取り外します。

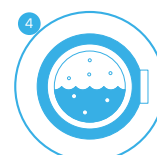


プレフィルターのラベルに記載されている指示に従ってプレフィルターを洗濯し、その後よく乾燥させます。



プレフィルターを本体に取り付けます。

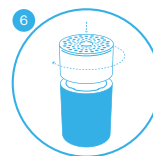


上部を下方方向にゆっくりと押しながらか時計回りに回し、本体内部の差込ロックにしっかりと固定します。

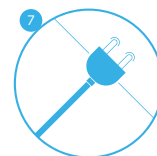


電源プラグをコンセントに差し込みます。

## メインフィルターの交換


メインフィルターを交換する前に電源プラグをコンセントから抜いてください。

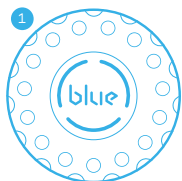


LEDが赤く点灯したら、メインフィルターを交換します。

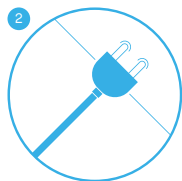


本体の電源をオフにして、本体の電源プラグをコンセントから抜きます。

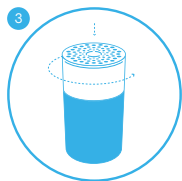


上部を下方方向にゆっくりと押しながら反時計回りに回し、本体内部の差し込みロックを解除します。

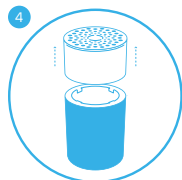


本体の上部を取り外します。

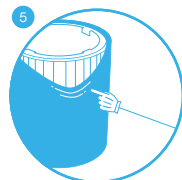


本体からプレフィルターを取り外します。

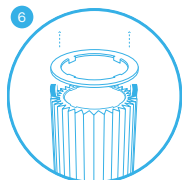


フィルターカバーを取り外します。

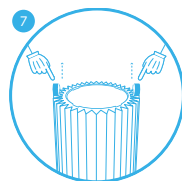


フィルターハンドルを持ち、上に引き上げてメインフィルターを取り外します。

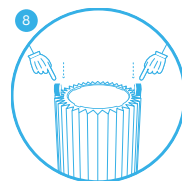


フィルターハンドルを持ちながら、新しいメインフィルターを取り付けます。取り付ける際に、フィルターハンドルが上に来ていることを確認してください。

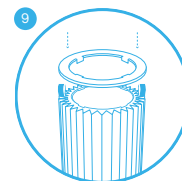


フィルターカバーをメインフィルターの上に寄せ、本体に差し込みます。フィルター上部表面の破損を防ぐために、必ず取り付けてください。

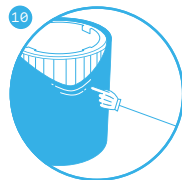

プレフィルターをメインフィルターにかぶせます。フィルターが完全に覆われるように取り付け、上部の端は、必ずフィルターカバーの上に乗せてください。

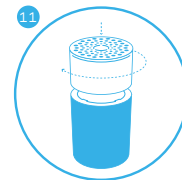

本体上部を下方方向にゆっくりと押しながら時計回りに回し、本体内部の差し込みロックにしっかりと固定します。

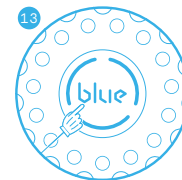

操作ボタンを5秒間長押しし、フィルター交換タイマーをリセットします。LEDが3回点滅し、赤色から白色に変わるとリセット完了です。

12

電源プラグをコンセントに差し込みます。

## アフターサービス

### ● 保証期間は1年間です

保証期間はご購入日から1年間です。ただし、保証書を紛失すると、ご購入日から1年以内でも有料対応となります。また、ご使用状況によっても有料対応となる場合がありますので、保証書の記載内容をご確認のうえ、大切に保管してください。

### ● 保証期間中の修理について

保証書の記載内容に基づいて修理致します。詳しくは保証書をご覧ください。

### ● 保証期間の終了後について

修理可能な故障の場合は、ご希望により有料修理させていただきます。スムーズなアフターサービスをご提供するため、保証期間終了後も保証書を保管してください。

修理に関するご相談はブルーエアサービスセンターにお問い合わせください。交換用フィルターのお求めについては、購入店舗またはブルーエアサービスセンターへご連絡ください。

### ブルーエアサービスセンター

0120-974-419 平日 9:30～17:30 (土日・祝日・年末年始 除く)

携帯電話・PHSからもご利用いただけます。

お客様からご提供いただいた個人情報は、お問い合わせへの対応、カタログの発送、その他情報提供に利用させていただきます。

個人情報の取扱いについて

<http://www.blueair.jp/support/policy>

洗濯可能なファブリックプレフィルターの仕様



ポリアミド：92% スパンデックス：7.3%

発売元：セールス・オンデマンド株式会社

住所：東京都千代田区神田駿河台2-9 KDX御茶ノ水ビル5F

## 仕様

適用床面積 <sup>1</sup>	22m <sup>2</sup> (13畳)
フィルター交換お知らせ機能	あり
タイマー機能	なし
運転速度	スピード1、2、3
外形寸法および本体質量	高さ： 425 mm (16.7 in) 幅： 200 mm (7.8 in) 奥行き： 200 mm (7.8 in) 本体質量： 1.52 kg (3.35 lbs)
清浄空気供給量	60 - 200 m <sup>3</sup> /h (35 - 120 cfm)
消費電力 <sup>2</sup>	10 W
運転音	17 - 46 dB(A)
フィルター交換の目安	約6ヶ月 <sup>3</sup>
保証期間	1年間

交換用フィルターのお求めについては、ご購入の店舗またはブルーエアサービスセンターへお問い合わせください。

<sup>1</sup> 日本電機工業会JEM1467に基く数値(スピード3運転時)

<sup>2</sup> 使用する環境によるため、実際の消費電力と異なる場合があります。

<sup>3</sup> 使用環境により異なります。

# Blue PURE 411

English User Manual  
Model: Pure411

SAFETY	26
SYSTEM OVERVIEW	28
WHAT'S IN THE BOX	30
USAGE	31
SETUP	32
ON/OFF AND OPERATING SPEEDS	33
FILTERS	34
CARE AND MAINTENANCE	39
SPECIFICATIONS	40

# General safety instructions

Remember, Pure 411 is an electrical appliance. Please read these safety instructions carefully before use and take the necessary precautions to reduce the risk of fire, electric shock or injury. **The Pure 411 warranty applies only if the unit is used according to these instructions.**



**WARNING:** Indicates a hazardous situation that, if not avoided, could result in death or serious injury.



**CAUTION:** Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

## General



**WARNING:**  
To avoid hazardous conditions, only the manufacturer, a service center authorized by Blueair or similarly qualified persons shall replace the power cord, if damaged.



### CAUTIONS:

- Use the power cable provided with your Pure 411 unit to plug directly into an appropriate, electrical outlet. (Refer to the rating label on your unit).
- Do not alter the plug in any way.
- Remember to always disconnect the power supply before servicing the unit.
- Do not use the unit if the power cable or plug is damaged or malfunctions in any manner.


- Keep the power cable away from heated surfaces.
- Do not sit on, stand or climb onto the unit or use the unit either as a table or for storage.
- Do not place any objects on top of the unit, block air outlets or intakes, or allow foreign objects to enter the unit as this may cause an electric shock or damage the unit.

## Intended Use



### CAUTIONS:


- Supervise children to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

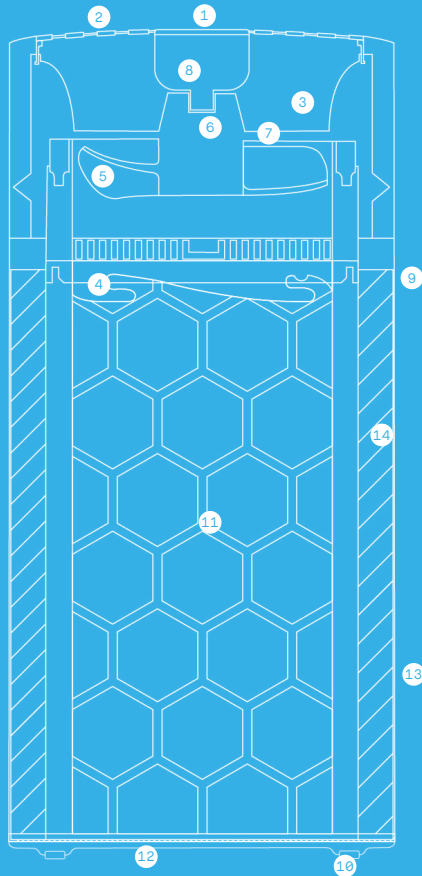


## Blueprint

- ① Touch button
- ② Air outlet
- ③ Ion chamber (Air stream optimizer)
- ④ Bayonet connection
- ⑤ Fan
- ⑥ Motor
- ⑦ Fan holder
- ⑧ PCB - Printed Circuit Board
- ⑨ Filter shelf
- ⑩ Circular rubber foot
- ⑪ Inner structure
- ⑫ Bottom plate
- ⑬ Pre-filter
- ⑭ Main filter (Particle filter or Particle + Carbon filter)

## Pure 411 package

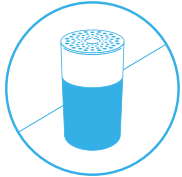

The Pure 411 air purifier

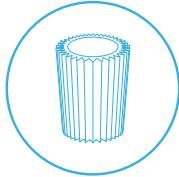

Particle or Particle + Carbon filter



Fabric pre-filter

## Options

- Particle filter (replacement filter)
- Particle + Carbon filter (replacement filter)
- Choice of color and design for the fabric pre-filter.

## Placement

Place Pure 411 in an upright position on the floor in your room. Be sure to place the unit where it won't be knocked over by any person or pet in the household.


This appliance is for household and indoor use only. Don't use it outdoors!

### Using Pure 411 in your bedroom:


After 5 seconds the light automatically dims.



## Getting started

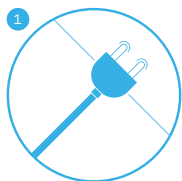


Plug in your Pure 411 air purifier.

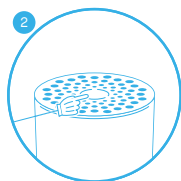


Press the top button to turn the unit on.  
Adjust the speed setting to the required level (see "On/off and speed control")


## On/off and speed control

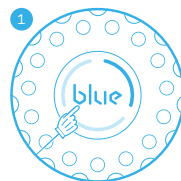


**On/Low**  
Press once to turn the unit on and set it to the recommended energy-efficient speed.

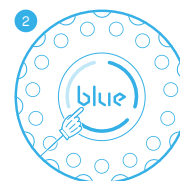

**Medium**  
Press twice to set to medium speed 2.

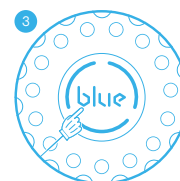

**High**  
Press three times to set to high speed 3.

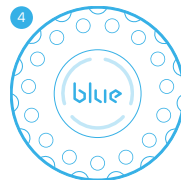

**Off**  
Press a fourth time to turn the unit off.

The light on the touch button indicates the selected speed.

Moreover, Pure 411 has an Autostart feature. This means that Pure 411 will automatically restart at the set speed if a power failure occurs, the unit is unplugged or a power switch timer is used.

# Filters

## General information:

The unit is delivered with a fabric pre-filter and either a Particle filter or a Particle + Carbon filter. These filters remove the following pollutants:

Particle filters remove:



PM2.5\*



Dust



Pollen



Pet dander



Mold



Dust mites



Bacteria

Particle + Carbon filters remove all the above pollutants, plus:



VOC



Smoke



Chemicals




Cooking odors

\*Particle matter smaller than 2.5 microns

### IMPORTANT:


Use only genuine Blueair filters to ensure proper function of your unit and to qualify for full warranty coverage.

## Button control functions

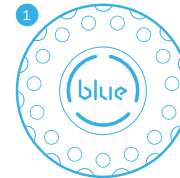

### Change filter

When the indicator light turns red (after 6 months of operation) you should change the main filter.

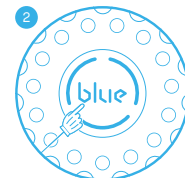


### Reset filter alert

Press the button down for a duration of five seconds to reset the filter alert.


## Vacuum or wash the pre-filter

Occasionally vacuum the exterior of the fabric pre-filter to remove dust.

Always unplug the unit before removing the fabric pre-filter

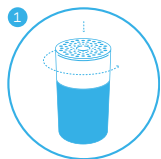


Carefully push the top cylinder down, at the same time rotating it *counter-clockwise* to open the bayonet lock inside.

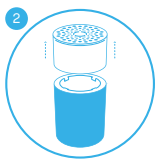


Remove the top cylinder from the unit.



Remove the pre-filter from the unit.

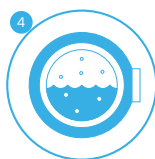


Wash the pre-filter in the washing machine, according to instructions on the pre-filter's label.

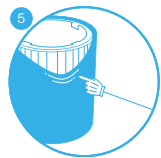

Attach the pre-filter onto the unit.




Carefully push the top cylinder down, at the same time rotating it *clockwise* to secure it back into the bayonet lock.

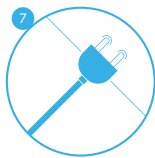


Plug in your Pure 411 air purifier.

## Change the main filter


Always unplug the unit before changing the main filter.

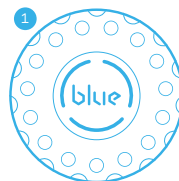


When the indicator light glows red, it's time to change the main filter.

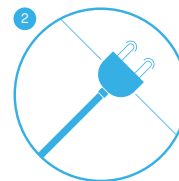


Turn off the unit and unplug it.

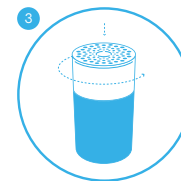


Carefully push the top cylinder down, at the same time rotating it *counter-clockwise* to open the bayonet lock inside.

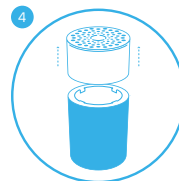


Remove the top cylinder from the unit.

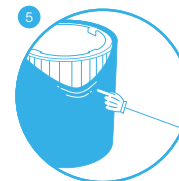


Remove the pre-filter from the unit.

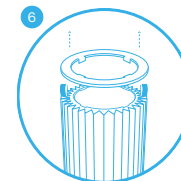


Carefully remove the filter shelf.

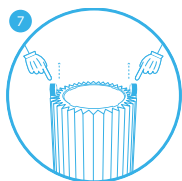


Grip the filter handles and pull upwards to remove the main filter from the unit.

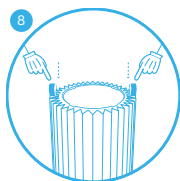


Position the new main filter onto the inner structure. The filter handles should face upwards.

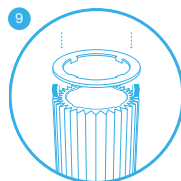


Press the filter shelf firmly into position above the main filter. The filter shelf protects the top edge of the main filter from damage.

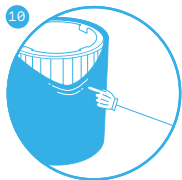


Attach the pre-filter over the main filter. The pre-filter should only cover the filter shelf, and not the inner filter ring of the filter holder unit.

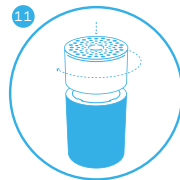

Carefully push the top cylinder down, at the same time rotating it *clockwise* to secure it back into the bayonet lock.

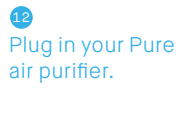

Plug in your Pure 411 air purifier.

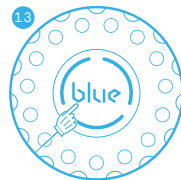




Press the touch button for a duration of 5 seconds to reset the filter replacement timer. This lets Pure 411 know that you have changed the filter. The indicator light flashes 3 times, and then changes from red to white.

## General care

Take good care of your Pure 411 to ensure that it delivers optimal performance.

- Vacuum the pre-filter occasionally to remove dust, or wash it on a gentle, low temperature cycle in the washing machine.
- Change the main filter every six months, depending on the operating conditions. Remember to unplug the unit before changing the main filter.
- When the unit is open to change the filter, vacuum any dust that may have accumulated inside the unit.
- Occasionally wipe the top of the unit with a dry dust cloth.

# Specifications<sup>1</sup>

Room size:	15 m <sup>2</sup> (161 sq. ft.)			
Clean Air Delivery Rate (CADR)	cfm m <sup>3</sup> /h	Smoke  105 180	Dust  120 200	Pollen  120 200
Filter replacement indicator	Yes			
On/Off timer	No			
Speeds	1-2-3-off			
Dimensions	Height:	425 mm (16.7 in)		
	Width:	200 mm (7.8 in)		
	Depth:	200 mm (7.8 in)		
	Weight:	1.52 kg (3.35 lbs)		
Airflow rate	60 - 200 m <sup>3</sup> /h (35 - 120 cfm)			
Air exchange <sup>2</sup>	5 per hour (15 m <sup>2</sup> or 161 sq.ft.room)			
Power usage	1.5 - 10 W			
Noise level	17 - 46 dB(A)			
Average filter service life	six months <sup>3</sup>			
Warranty	Local regulations			

Blue is available in different colors for model Pure 411. The colored fabric works as a pre-filter.

<sup>1</sup>Certified ratings as stated are based on models with Particle Filter for Blue Pure 411. Ratings may be affected by use of other Blue filter models.

<sup>2</sup>Air changes per hour are calculated on the recommended room size, assuming 8-foot (2.4-m) ceilings. For smaller rooms, the air changes per hour will increase.

<sup>3</sup>Depending on air quality in the area of use, the recommended six-month filter lifetime may be longer.





[www.blueair.com](http://www.blueair.com)  
[www.blueair.com/contact-us](http://www.blueair.com/contact-us)

**Blueair AB**

Karlavägen 108  
115 26 Stockholm  
Sweden  
Tel: +46 8 679 45 00

**Blueair AB Middle East**

Jafza One  
Office No. AB1503  
Jebel Ali Free Zone  
P.O. Box No. 263947  
Dubai  
+971 (4)8821244

**Blueair Inc.**

Suite 1900  
100 N LaSalle Street  
Chicago, IL 60602  
Tel: +1 888 258 3247

**Blueair India Pvt. Ltd.**

Embassy of Sweden  
Nyaya Marg, Chanakyapuri  
New Dehli - 110021  
Tel: +91 11 4606 7121  
Toll free info number: 18008331188

**Blueair (Shanghai) Trading  
Co. Ltd.**

Rm 1005 City Gateway  
No. 398 North Caoxi Road  
Xuhui Distr, Shanghai  
Tel: +86 21 6091 0981