
ホワイトポリエステル塗装スチール製テープ

WHITE POLYESTER PAINTED STEEL TAPE MEASURE

特長 Feature

- ●折り曲がりに強く耐久性にすぐれたスチール製芯材(SK-85)
- ●ホワイトポリエステル樹脂塗料焼付塗装後目盛印刷を施し、その上に透明樹脂塗料を焼付塗装した巻尺です
- ●テープが３倍の速さで巻き取れます
- ●痛みやすい先端をポリオレフィン樹脂で保護
- ●テープ先端のエラストマーダンパーで巻き取り終わりの衝撃を緩和
- ●ゴミなどによる故障を防ぐ密閉ギヤ室
- ●空転防止機構付
- ●軽くて丈夫な ABS 樹脂ケース
- ●滑りにくいエラストマー石突
- ●握りやすいエラストマー・グリップ採用


- ● This tape measure has a durable, kink resistant carbon tool steel core
- ● A transparent baked resin paint has been applied over the finely printed graduation, which has been printed directly onto a white polyester baked resin paint base
- ● Rewinds 3 times faster
- ● Polyolefin resin coat on tip of tape
- ● Elastomer damper on tip of tape lessens impact of rewinding
- ● Sealed compartment protects tape from dirt and elements
- ● Protection against idling
- ● Light and durable ABS case
- ● Elastomer case top
- ● Comfortable elastomer grip

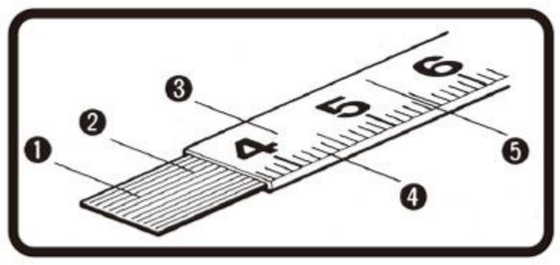


❶スチール製芯材（SK85）
❷前処理
❸ホワイトポリエステル樹脂塗料の焼付塗装
❹目盛印刷
❺透明樹脂塗料の焼付塗装

❶Carbon tool steel core
❷Pre-treatment
❸White polyester baked resin paint base
❹Finely printed graduation
❺Transparent baked resin paint


テープはケースから簡単に着脱できます Tape is easily detached and replaced!

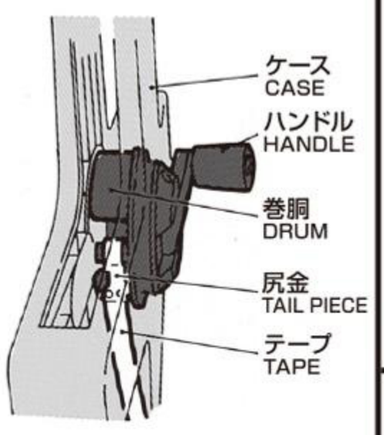

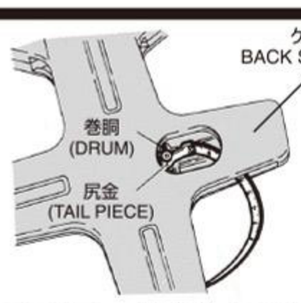

1 巻かれているテープを最後まで引き出す。

Pull tape out to the fullest extent.

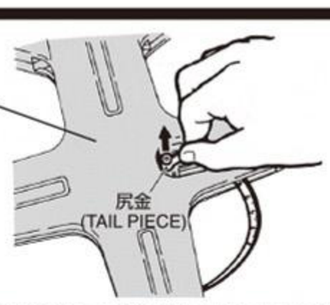

2 ケース裏の窓より巻胴についている尻金を引き出す。

Expose tail piece in tape replacement window and detach the tape from the drum pin.




3 テープをケースより外す。

Completely remove tape from reel by pulling it through the leader.

●元に戻すには逆の手順で、尻金を巻胴にかけ、尻金の外れがない事を確認してから、ハンドルを回してテープを巻きます。
●To replace the tape, follow the instructions above in reverse order.

左手(左利き)で操作をしたい場合

To operate with left hand (left-handed individual)

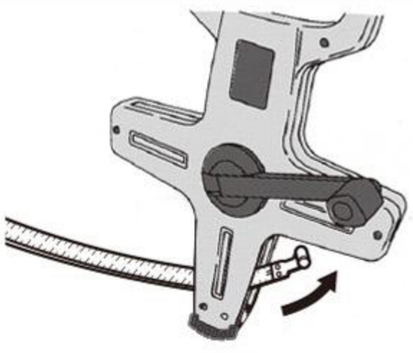

ハンドルを左手で操作したい場合、ハンドルに対してテープを図のような向きで取付ける。

To operate the handle with your left hand, attach tape oriented as shown with regard to the handle.

ご使用前に必ずお読みください

使用上の注意

- ○使用前に破損や変形の有無を確認し、異常がある場合は事故の原因になりますので使用しないでください。
- ○事故の原因になりますので、修理・分解・改造しないでください。
- ○幼児の手の届かない所に保管してください。
- ○測定の用途以外には使用しないでください。
- ○ケガの恐れがありますので、テープに折れ、キレ等が発生した場合は使用しないでください。
- ○ケース内のすき間がなくなりテープが巻き取りきれなくなりますので、異物を巻き込まないようにしてください。
- ○テープはゆるやかに巻き取ってください。急激に巻き込みますと、テープが暴れ、ケガをする場合があります。またテープの曲がりや破損の原因になります。
- ○テープ巻き取りの際に、テープが絡まった場合には巻き取りを中止して、ほぐしてから巻き取りを行ってください。テープの曲がりや破損の原因となります。
- ○テープが錆びやすくなりますので、テープに水分がついたままにしないでください。
- ○テープが破損する恐れがありますので、逆回転巻き取りはしないでください。
- ○製品破損の原因になりますので、お手入れにはシンナー等の薬品を使用しないでください。

- ○Inspect before each use. Do not use if damaged or does not function correctly.
- ○Do not modify from original design.
- ○Keep out of reach of children.
- ○Do not use the product for other than its designated purpose.
- ○Do not use if tape is kinked or torn.
- ○Foreign material or debris inside the case may prevent the tape from rewinding completely.
- ○Use care when rewinding to avoid twists or kinks in the tape.
- ○If the tape becomes tangled, immediately stop rewinding and straighten the tape before continuing.
- ○Always wipe moisture and debris off the tape before rewinding to prevent tape corrosion and clogging of the rewind system.
- ○Rewind in the clockwise direction only to prevent damage to the tape and rewind system.
- ○Do not use paint thinners, gasoline, or chemical solvents to clean the tape or tape case.

本製品には通電性があります。感電に注意してください。
Electrical hazard. Do not use near open wires.

安全確保の為、保護メガネ・作業手袋を着用してください。
Wear safety goggles and gloves when using.

紙
外装箱

43494