

# Low-Volume Liquid & Powder Adapter

## Use instructions

1



Remove lid from slide

2



Fill slide with sample  
(avoid contamination  
with a pipette or  
utensil)

3




Place the lid back on  
the slide — there may  
be some overflow (this  
is ok as it helps prevent  
air bubbles)

4



Insert the slide into the  
base of the adapter

5

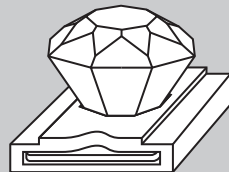

Place the Nix QC into  
the octagon opening  
(at the top of the  
adapter). You're now  
ready to scan!

PLEASE NOTE: When placing the lid back on the slide, try to avoid air bubbles. It's best to overfill the slide rather than underfill as this will help reduce any bubbles that might come up. If you have any questions, please contact us at [qc.support@nixsensor.com](mailto:qc.support@nixsensor.com)