
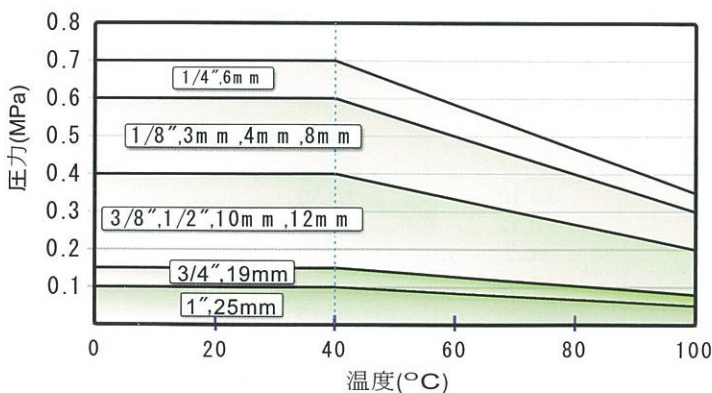
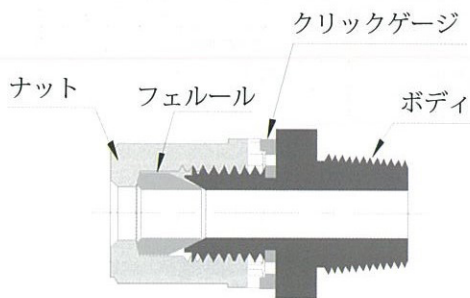
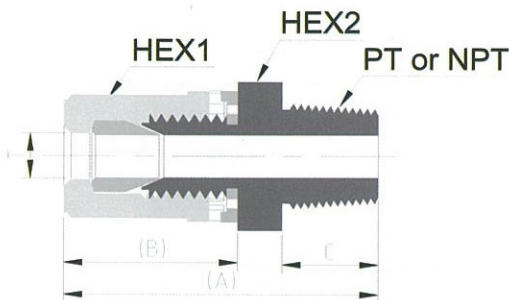


# MCT メールコネクタスルー

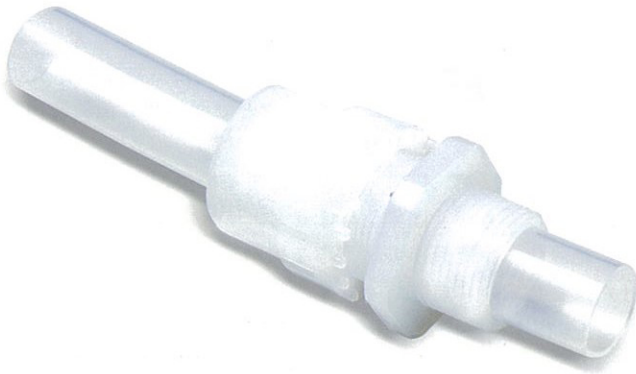

### ・ご使用方法

- ① チューブをナット、フェルール、本体の順に貫通させます。
- ② ナットの突起とクリックゲージが接触し音がするところまで締め付ければ完了です。

### INCH + NPT TYPE

	T	NPT	HEX1	HEX2	(A)	(B)	C
MCT-H1-N1	3.18X2.18	1/8"	11	13	33.8	18.8	9
MCT-H2-N1	6.35X3.95	1/8"	16	20	38.5	23.5	9
MCT-H2-N2	"	1/4"	"	"	42.5	"	13
MCT-H2-N3	"	3/8"	"	"	"	"	"
MCT-H3-N3	9.53x6.35	3/8"	19	23	46.7	27.7	"
MCT-H3-N4	"	1/2"	"	"	50.5	"	16.8
MCT-H4-N4	12.7x9.53	1/2"	24	29	57.1	33	16.8
MCT-H4-N6	"	3/4"	"	"	57.4	"	17.1
MCT-H6-N6	19.05X15.8	3/4"	32	38	65.4	41	"
MCT-H6-N8	"	1"	"	"	69.7	"	21.4
MCT-H8-N8	25.4x22.2	1"	41	49	76.7	48	21.4

### MM + PT TYPE

	T	PT	HEX1	HEX2	(A)	(B)	C
MCT-M3-R1	3X2	1/8"	11	13	33.8	18.8	9
MCT-M4-R1	4X3	"	"	"	"	"	"
MCT-M4-R2	"	1/4"	"	"	37.8	"	13
MCT-M6-R1	6X4	"	16	20	38.5	23.5	9
MCT-M6-R2	"	1/4"	"	"	42.5	"	13
MCT-M6-R3	"	3/8"	"	"	"	"	"
MCT-M8-R2	8X6	1/4"	19	23	46.7	27.7	13
MCT-M8-R3	"	3/8"	"	"	"	"	13
MCT-M8-R4	"	1/2"	"	"	50.5	"	16.8
MCT-M10-R3	10X8	3/8"	"	"	46.7	"	13
MCT-M10-R4	"	1/2"	"	"	50.5	"	16.8
MCT-M12-R4	12x10	1/2"	24	29	57.1	33	16.8
MCT-M12-R6	"	3/4"	"	"	57.4	"	17.1
MCT-M19-R6	19X15.8	3/4"	32	38	65.4	41	"
MCT-M19-R8	"	1"	"	"	69.7	"	21.4
MCT-M25-R8	25X22	1"	41	49	76.7	48	21.4

### INCH + PT TYPE

	T	PT	HEX1	HEX2	(A)	(B)	C
MCT-H1-R1	3.18X2.18	1/8"	11	13	33.8	18.8	9
MCT-H2-R1	6.35X3.95	1/8"	16	20	38.5	23.5	"
MCT-H2-R2	"	1/4"	"	"	42.5	"	13
MCT-H2-R3	"	3/8"	"	"	"	"	"
MCT-H3-R3	9.53X6.35	3/8"	19	23	46.7	27.7	"
MCT-H3-R4	"	1/2"	"	"	50.5	"	16.8
MCT-H4-R4	12.7x9.53	1/2"	24	29	57.1	33	16.8
MCT-H4-R6	"	3/4"	"	"	57.4	"	17.1
MCT-H6-R6	19.05X15.8	3/4"	32	38	65.4	41	"
MCT-H6-R8	"	1"	"	"	69.7	"	21.4
MCT-H8-R8	25.4x22.2	1"	41	49	76.7	48	21.4

UNIT: MM

全ての寸法は参考値です

Tは適用チューブの外径と内径を示します