


ASSEMBLY INSTRUCTIONS



DO NOT USE METAL HAMMER FOR ASSEMBLY

1 Connect 2 Posts using a set of Post Connectors (a set includes a top and bottom Post Connector). Repeat for second side of unit.
USE A RUBBER Mallet TO ENSURE PROPER ASSEMBLY

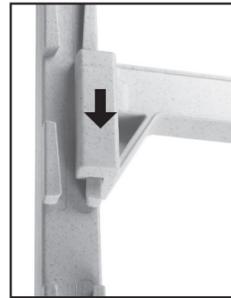

Traverse slides easily down onto dovetails


2 Center the bottom of the traverse dovetails with the dovetails on the posts. Slide smoothly into position.




3 Place Shelf Plates on Traverses. Add additional Traverses and Shelf Plates to complete the unit desired.



4 Add an additional unit by connecting two more posts with post connectors and the setting traverses onto the dovetails on the posts. The traverses on the first and second unit share the middle post. Place shelf plates on the traverses to complete the second unit. Add an additional unit in a 90° corner using corner connectors.

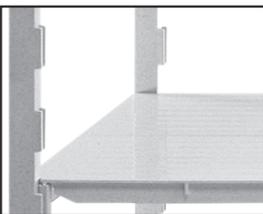

Easy to adjust shelves:
To adjust, remove Shelf Plates and Traverses and reset as desired. No need to disassemble the entire unit. Shelves can be adjusted in 4"(100mm) increments.

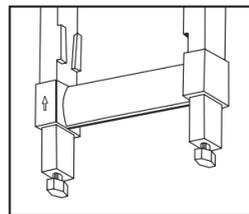

Easy to adjust foot:
Handle irregularities on the floor by easily adjusting the foot.



Prior to loading:
Accurately level the entire unit by adjusting the feet.

CAMSHELVING® ADDITIONAL COMPONENTS

There are a variety of additional components available to customize your storage needs. From making your shelving mobile to securing it to be more stable, Cambro has a solution for you.



Seismic Foot

Available to bolt a Post to the floor for a more stable base in geographic regions where earthquakes can occur or on cruise ships. Screws not included.



Wall Fastener

Fasten a unit to a wall as a safety precaution in a geographical region where earthquakes can occur or on cruise ships. Screws not included.



Identification Tag

Easily clip onto traverse to help identify stored items. Made of PVC. Includes 12 HACCP labels.



Casters

(Camshelving and Elements only)
A variety of Casters are available for Mobile or High Density Units



Donut Bumper

(Camshelving and Elements only)
3 1/2" (90mm) Bumper can be used on mobile units to protect the shelving if bumped.



Fence System

(Camshelving only)
Ideal for use on stationary or mobile units to prevent stored items from falling off. Available in any length and two heights by combining polypropylene brackets and one or two anodized aluminum rods.



Cambro Manufacturing Company 5801 Skylab Road, Huntington Beach, CA 92647
Telephone: (714) 848-1555 Toll Free: (800) 854-7631 Customer Service: (800) 833-3003
© Cambro Manufacturing Company Printed in U.S.A. 9/13
LIT1336




D091322


Camshelving® SERIES

ASSEMBLY INSTRUCTIONS


CAMSHELVING® ASSEMBLY COMPONENTS

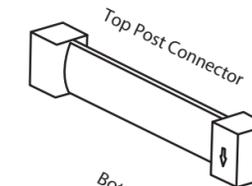


Top Post Connector

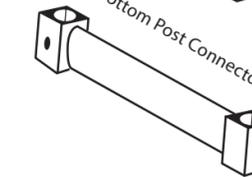

Bottom Post Connector

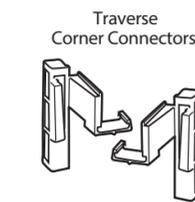


Traverse Corner Connectors

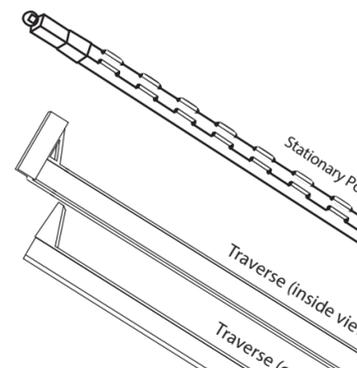


Stationary Post

Traverse (inside view)


Traverse (outside view)

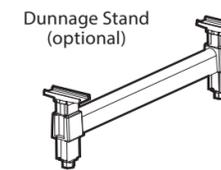


Dunnage Stand (optional)

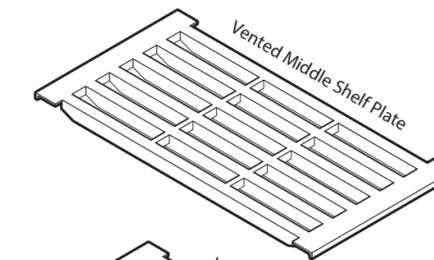


Vented Middle Shelf Plate

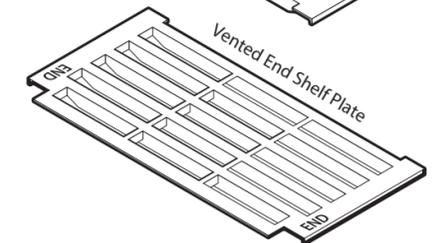

Vented End Shelf Plate

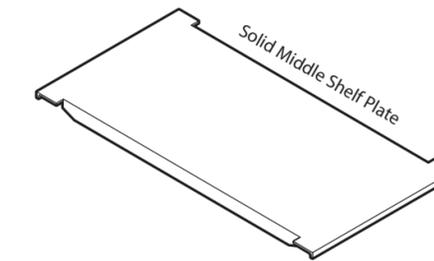

Solid Middle Shelf Plate

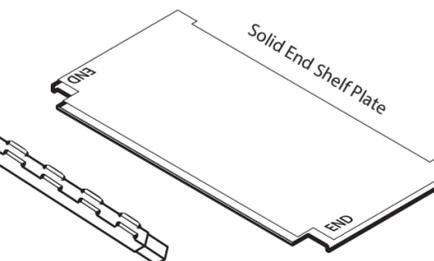

Solid End Shelf Plate



TOOLS REQUIRED



Level (Elements Optional)



Rubber Mallet Only



www.cambro.com