

特長
簡易ロック付きのステンレス製アームキャッチです。
南京錠 (TL-285J・1-241 頁) 用の穴が開いています。締付時にキーパー
の左右のズレを中央へ引き寄せます。


用途
軽量用扉・ボックスカバー・工作機械・特装車等

仕様
推奨取付：M3 サラ小ねじ、又は呼び径3 サラリベット（取付穴には、
面取り C0.5 以上を施してください）。
止め金部分を持ち上げ、90°回転させると、簡易ロック状態となります。

注意事項
緩衝用にパッキン等をご使用ください。

■部品表 Parts List

部番 No.	部品名 Part Name	材質 Material	処理 Finish	数 Quantity
1	ベース Base	SUS304	光沢バレル研磨 Shiny Barrel Polishing	1
2	ブラケット Bracket		—	1
3	止め金 Cam		光沢バレル研磨 Shiny Barrel Polishing	1
4	プレート (A) Plate(A)		—	1
5	円錐ばね Cone Spring			1
6	プレート (B) Plate(B)			1
7	レバー Lever		光沢バレル研磨 Shiny Barrel Polishing	1
8	アーム Arm		Shiny Barrel Polishing	1
9	シャフト Shaft	SUS	—	1
10	ピン Pin			1
11	スプリング Spring	SUS304		1
12	キーパー Keeper	SUS304	光沢バレル研磨 Shiny Barrel Polishing	1

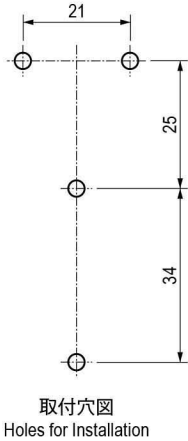


Characteristic
Stainless steel latch with simple lock. Padlock can be inserted. Arm
can keep keeper steady.

Application
Lightweight door / Cover for Box / Machine tools / Special equipped
vehicles, etc.

Specification
Recommended Installation: M3 countersunk screw, or nominal
diameter 3 countersunk rivet.
(Installation hole should be over C0.5 chamfering processed.) The
Latch can be locked by rotating stopper 90°.

Note
Use a packing for a cushion.

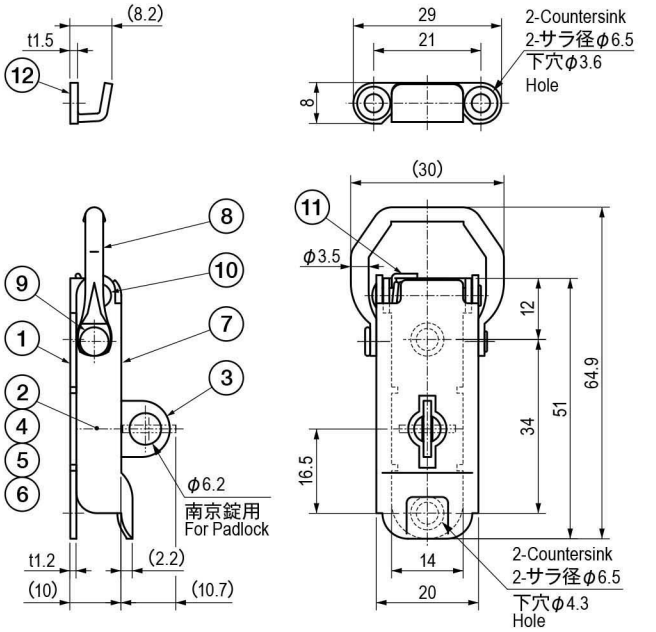

仕様 Specification

型番 Model No.	許容荷重 N (kgf) Allowable Load N (kgf)	自重 (g) Net Weight (g)
TL-390	110 (11.2)	38