






特長
レバーとアームが連動した蓋止めです。手作業によるキーパーへの掛け外しが省けるため、操作性に優れています。また、内部のスプリングによる締付力もあります。

用途
一般産業機械・工作機械・計測機器・ボックス等


注意事項
サラねじ又はサラリベットで取り付ける場合は、取付側に C0.5 程度の面取り加工を施してください。

■部品表 Parts List

部番 No.	部品名 Part Name	材質 Material	処理 Finish	数 Quantity
1	ベース Base	SUS304	光沢バレル研磨 Shiny Barrel Polishing	1
2	レバー Lever			1
3	リンク Link			1
4	アーム Arm			1
5	アームカバー Arm Cover	PC	黒色 (Black)	1
6	ストライカーバー Striker Bar	SUS304	—	1
7	スプリング Spring			2
8	シャフト (A) Shaft (A)			2
9	シャフト (B) Shaft (B)			2
10	板バネ Plate Spring	SUS	—	1
11	平座金 Plain Washer			2
12	キーパー Keeper	SUS304	光沢バレル研磨 Shiny Barrel Polishing	1

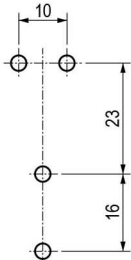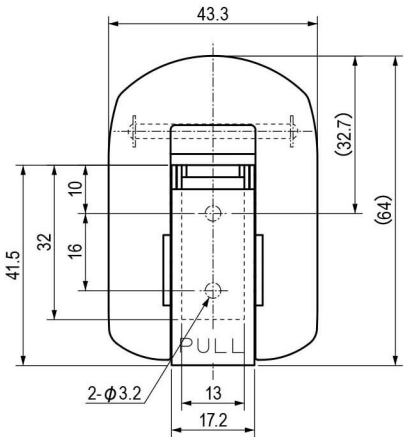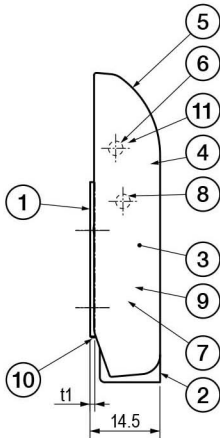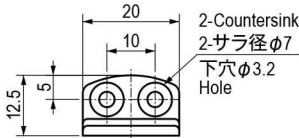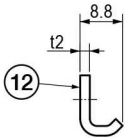

取付穴図
Holes for Installation

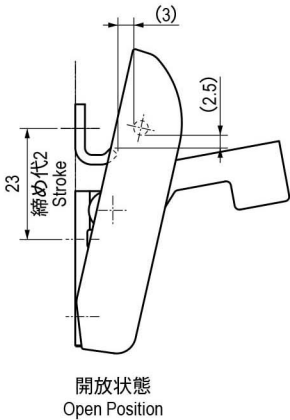

開放状態
Open Position

仕様 Specification

型番 Model No.	締付力 N (kgf) Tightening Force N (kgf)	自重 (g) Net Weight (g)
TL-396	約 49 (5) approx.49 (5)	56

Characteristic
Lever working with arm makes it easy to operate. Inserted spring help to insure tight latching.

Application
General Industrial machines / Machine tools / Measuring instruments / Box, etc.

Note
Installation hole should be over C0.5 chamfering processed before using screws or rivets.