

特長
各種機器の縮小化に伴い開発された FK ロックの小型・小径タイプです。
TL-225 の取付穴に互換性があります。小型化されてもマスターキー仕様
(受注生産) が可能です。
取り付け工数の削減化を考慮したリテーナータイプです。止め金具を組み
替えることで、止め金具の向きを変更することが可能です。

用途
情報端末機・制御装置・OA 機器等

仕様
キーの回転は、D・A 間 90°回転です。キーの抜き差しは、D 点でのみ可能
です (1 点抜き)。 (2 点抜きは製作しておりません。)
鍵違いやマスターキー仕様も製作可能です。ご相談ください。
錠前の注意事項 (1-183 頁) もご確認ください。


■部品表 Parts List

部番 No.	部品名 Part Name	材質 Material	処理 Finish	数 Quantity
1	ロック Lock	C3604	Cr	1
2	回転規制カム Rotation Control Cam	SPCC	3 価クロメート Trivalent Chromate Treatment	1
3	レバー Cam			1
4	ウェーブワッシャー Wave washer	SUS304	—	1
5	六角ナット Hexagon Nut	SWRCH	3 価クロメート Trivalent Chromate Treatment	1
6	クリップ Clip	SUS304	—	1
7	キー Key	C3713/PP	Ni/ 黒色 Black	2

Characteristic
Miniature cam lock. It is compatible with installation hole of TL-225. Easy to install by the clip. Can change the direction of cam by rearranging the position of cam.

Application
Information devices / Control devices / Office automation appliances, etc.

Specification
The rotational angle of the key is 90° between points D and A.
The key can be inserted or removed only at point D. Please contact us for master key system and different keys.
See the page "Notes for Using Locks".

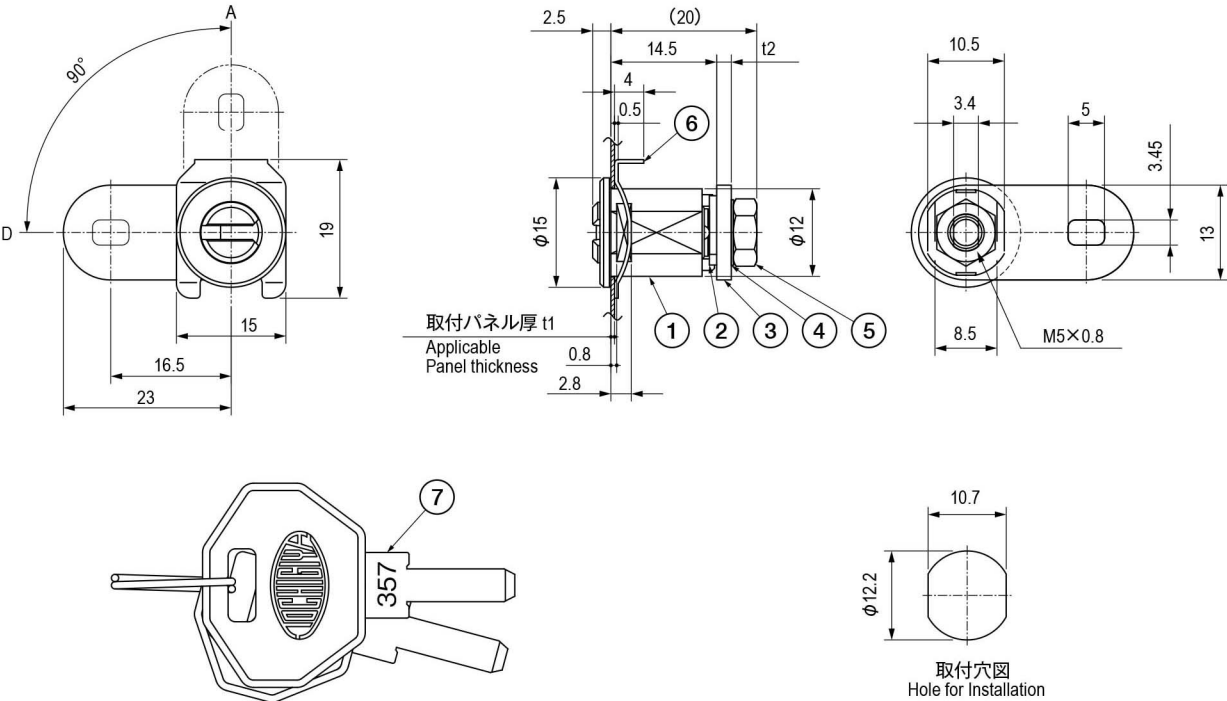

型番 Model No.	鍵番号 Key No.
TL-357	No.357