

Designed to Reposition Heavy Machinery

Let It Glide the Last Few Millimeters

**Slip sheets
as slippery as on ice**

Suberun Paper

Thickness:
0.12mm

Coefficient of
Friction:
0.04

**Double
-sided
Type
SB-WR**

Made in Japan



Heavy Objects



Switchboard



Motor Equipment



Air Conditioning Equipment
(Outdoor Unit)

Used for installing and positioning
a variety of heavy objects.

**Slide it under heavy objects for easy,
precise installation positioning.**



Double-sided type Suberun Paper is...

Easy to Handle and Set Up

Operates smoothly even
if it curls, thanks to the
double-sided feature.

Economical with Fewer Sheets

When more glide is needed, our dou-
ble-sided sheets can be added individu-
ally without the need to match pairs—unlike
the single-sided type, which requires pair-
ing two sheets.



Product details and pricing information are available on the other side. →

Double-sided Type (SB-WR)



- Maximum Weight: Less than 10 tons
- Adjustment Range: Within 100mm

SuberunPaper is not designed for transporting heavy objects.

**Pre-Cut Sheets:
No Cutting Necessary!**

Product Code: **SB-WR40**

Size: A4

Size: A4 x 40 sheets
Weight: About 300g
Color: White
Coefficient of Friction: 0.04
Thickness: 0.12mm

**Easy-Carry Rolls:
Ready to Transport!**

Product Code: **SB-WR30R**

Width: 300mm
(Standard size)

Size: 300mm x 30m
Weight: About 1.2kg
Color: White
Coefficient of Friction: 0.04
Thickness: 0.12mm

Product Code: **SB-WR50R**

Width: 500mm
(Wider size)


Size: 500mm x 30m
Weight: About 2.1kg
Color: White
Coefficient of Friction: 0.04
Thickness: 0.12mm

Four Easy Steps to Use SuberunPaper!




**STEP
01**

Cut

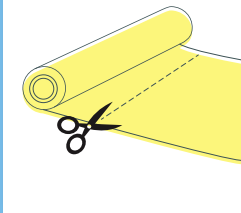


**STEP
02**

Pair

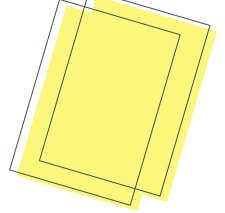


**STEP
03**

Place

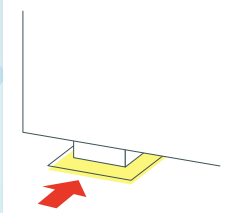

**STEP
04**

Move

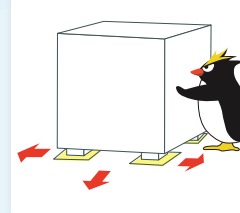

Complete!

- 01** Cut SuberunPaper into an appropriate size.
- 02** Pair two sheets together to form a set. (Adding more sheets, like three or four, enhances the slide.)
- 03** Jack up to lift the object and place the paired SuberunPaper sheets under the foundation of the object and place the object back on the floor.
- 04** Finalize the installation position and then jack up the object again to just enough to be able to pull out the SuberunPaper.

Uneven surfaces or excessive weight may cause the sheets to tear.

Where to buy



Asumaru Honpo Co., Ltd.

1908-2 Obayashi, Yakage-chou, Oda-gun, Okayama, 714-1202, Japan

URL: <https://asu-maru.com/english>

e-mail: info@asu-maru.com