

DH-XVR5108H-4KL-I3-8P

8CH Penta-brid 4K Value/5MP Mini 1U 1HDD WizSense Digital Video Recorder



WizSense

Launched by Dahua Technology, WizSense is a series of AI products and solutions that adopt independent AI chip and deep learning algorithm. It focuses on human and vehicle with high accuracy, enabling users to fast act on defined targets. Based on Dahua's advanced technologies, WizSense provides intelligent, simple and inclusive products and solutions.

Series Overview

Dahua Technology, a world-leading video-centric smart IoT solution and service provider, debuted its new XVR series, XVR5000-4KL-I3 Series featuring max.full-channel SMD Plus to benefit customers from AI upgrade (The number of channels differs depending on the model. Please refer to the specifications below for information on the number of channels.). This series has been developed to reduce false-alarm rates and the cost of human surveillance, thus bringing great value to customers in search of products with accurate human/vehicle alarm to raise the security level of various indoor and outdoor facilities.

Functions

PoC

By transmitting power over the same coaxial cable with video, HDCVI PoC technology further simplifies the deployment of HDCVI system, and therefore reduces installation time and labor costs. Balun could be connected for compatibility with UTP transmission when PoC function is disabled.

Face Recognition

Dahua Face Recognition technology extracts the features of captured faces and compares them with that in face database.

*Face Recognition conflicts with SMD Plus and Perimeter Protection.

Perimeter Protection

Automatically filters out false alarms caused by animals, rustling leaves, bright lights, etc. Enables system to act secondary recognition for the targets. Improves alarm accuracy.

SMD Plus

With intelligent algorithm, Dahua Smart Motion Detection technology can categorize the targets that trigger motion detection and filter the motion detection alarm triggered by non-concerned targets to realize effective and accurate alarm.

- 8-channel SMD Plus for analog channels or 16-channel SMD by camera which allows the device to trigger accurate alarms for humans and vehicles.
- 8-channel perimeter protection for analog channels which supports tripwire and intrusion detection powered by AI.
- 2-channel face recognition for analog channels which supports face comparison.
- 8-channel AI Coding saves on storage and bandwidth while maintaining the details of targets in videos.
- Supports HDCVI, AHD, TVI, CVBS and IP video input.
- Supports up to 16-channel IP camera input and each channel can be up to 8 MP. The incoming bandwidth reaches 128 Mbps.
- Smart H.265+ and H.265 dual-stream video compression.
- IoT and POS capabilities.
- All the channels support PoC AT and PoC AF cameras, and the XVR auto recognizes PoC cameras that have different power consumption levels.



AI Coding-ABR

Compared with H.265, AI coding-ABR can save 50% on storage costs, and save bit rate for complex scenes, which can prioritize image quality in dynamic scenes.

QuickPick 2.0

By employing the back-end perimeter protection algorithm, QuickPick 2.0 not only retains the capability to identify the color of clothing and vehicles, which was offered by its predecessor QuickPick 1.0, but it also possesses the enhanced ability to detect various types of hats, clothing and vehicles, thus greatly improving the accuracy of the search function.

Privacy Protection

Dahua Privacy Protection technology is capable of masking detected human faces and subsequently removing the mask, ensuring the privacy of specific individuals is protected.

Irregular Black Block Masking

Dahua's black block masking function supports the use of irregular shapes for masking, ensuring privacy in public and private locations.

HDMI (4K)

The HDMI port can support up to 4K output, delivering clear and highly detailed images.

Technical Specification

System

Main Processor	Industrial-grade processor
Operating System	Embedded Linux
Operating Interface	Web; Local GUI

Quick Pick

QuickPick 2.0 AI by Recorder (Number of Channels)	2 channels
---	------------

Perimeter Protection

Perimeter Performance AI by Recorder (Number of Channels)	Advanced Mode: 2 channels, 10 IVS rules for each channel General Mode: 8 channels, 10 IVS rules for each channel
---	---

Face Detection

Face Attributes	6 attributes
Face Detection Performance of AI by Recorder (Number of Channels)	2 channels (up to 12 face images/s each channel)

Privacy Protection

Privacy Protection Performance of AI by Recorder (Number of Channels)	1 channel
---	-----------

Face Recognition

Face Database Capacity	Up to 10 face databases with 20,000 images.
Face Recognition Performance of AI by Recorder (Number of Channels)	2 channels

SMD Plus

SMD Plus by Recorder	8 channels: Secondary filtering for human and vehicle, reducing false alarms caused by leaves, rain and lighting condition change
SMD Plus by Camera	16 channels

AI Video Quality Analytics

AI Video Quality Analytics by Recorder	8 channels: Supports detecting brightness levels, color cast, defocus, overexposure, contrast levels, black and white
--	---

Scene Changing

Scene Changing by Recorder	1 channel
----------------------------	-----------

Irregular Black Block Masking

Irregular Black Block Masking by Recorder	1 channel
---	-----------

Audio and Video

Analog Camera Input	8 BNC ports, supports HDCVI/AHD/TVI/CVBS auto-detect
---------------------	--

Camera Input	1. CVI: 4K@25/30 fps; 4K@12.5/15 fps; 6 MP@20 fps; 5 MP@25 fps; 5 MP@20 fps; 4 MP@25/30 fps; 1080p@25/30 fps; 720p@25/30 fps; 720p@50/60 fps. 2. TVI: 4K@15 fps; 5 MP@20 fps; 4 MP@25/30 fps; 3 MP@25/30 fps; 1080p@25/30 fps; 720p@25/30 fps. 3. AHD: 4K@15 fps; 5 MP@20 fps; 4 MP@25/30 fps; 3 MP@25/30 fps; 1080p@25/30 fps; 720p@25/30 fps.
IP Camera Input	Up to 16 channels of IPC access 8 IP channels by default + 8 channels (analog channels are converted to IP channels) Incoming bandwidth: 128 Mbps, recording bandwidth: 128 Mbps and outgoing bandwidth: 128 Mbps *After IP extension is enabled, Video Quality Analytics, Scene Changing, Face Recognition, Face Detection, SMD, Perimeter Protection, QuickPick 2.0 and Privacy Protection cannot be used.
Encoding Capacity	Encode Enhancement disabled : Main stream: 4K@(1 fps~7 fps); 6 MP@(1 fps~10 fps); 5 MP@(1 fps~12 fps); 4K-N/4 MP/3 MP@(1 fps~15 fps); 4M-N/1080p/720p/960H/D1/CIF@(1 fps~25/30 fps) Sub stream: 960H@(1 fps~15 fps); D1/CIF@(1 fps~25/30 fps) Encode Enhancement enabled : Main stream: the 1st, 5th channel 4K@(1 fps~15 fps), others 4K@(1 fps~7 fps); the 1st, 5th channel 6 MP@(1 fps~20 fps), others 6 MP@(1 fps~10 fps); the 1st, 5th channel 5 MP@(1 fps~25 fps), others 5 MP@(1 fps~12 fps); the 1st, 5th channel 4K-N/4 MP/3 MP@(1 fps~25/30 fps), others 4K-N/4 MP/3 MP@(1 fps~15 fps); 4K/6 MP@(1 fps~10 fps);5 MP@(1 fps~12 fps); 4K-N/4 MP/3 MP@(1 fps~15 fps); 4M-N/1080p/720p/960H/D1/CIF@(1 fps~25/30 fps) Sub stream: 960H@(1 fps~15 fps); D1/CIF@(1 fps~25/30 fps) *When Encode Enhancement is enabled, Video Quality Analytics, Scene Changing, Face Recognition, Face Detection, Perimeter Protection, QuickPick 2.0 and Privacy Protection cannot be used.
Dual-stream	Yes
Video Bit Rate	32 kbps~6144 kbps
Audio Sampling	8 kHz, 16 bit
Audio Bit Rate	64 kbps
Video Output	1 HDMI, 1 VGA HDMI: 3840 × 2160, 1920 × 1080, 1280 × 1024, 1280 × 720 VGA: 1920 × 1080, 1280 × 1024, 1280 × 720 *Simultaneous/heterogeneous video sources output for VGA and HDMI is configurable.
Multi-screen Display	When IP extension mode not enabled: 1/4/8/9 When IP extension mode enabled: 1/4/8/9/16
Third-party Camera Access	Panasonic; Sony; Hanwha; Axis; Arecont; ONVIF

Compression Standard

Video Compression	AI Coding; Smart H.265+; H.265; Smart H.264+; H.264
Audio Compression	G.711a; G.711u; PCM

Network

Network Protocol	HTTP; HTTPS; TCP/IP; IPv4; IPv6; RTSP; UDP; NTP; DHCP; DNS; SMTP; UPnP; IP Filter; FTP; DDNS; SNMP; Alarm Server; P2P; Auto Registration; IP Search (Supports IP camera, DVR, NVS, etc.)
Mobile Phone Access	iOS; Android
Interoperability	ONVIF 23.12 (Profile T; Profile S; Profile G); CGI; SDK
Browser	Chrome; IE; Safari; Edge; Firefox

Recording Playback

Record Mode	General; alarm; motion detection; intelligent; POS
Recording Playback	1/4/9
Backup Method	USB device and network
Playback Mode	Instant playback; general playback; event playback; tag playback; smart playback

Alarm

General Alarm	Motion detection; alarm box; HDCVI alarm; camera external alarm; network alarm; PIR alarm
Anomaly Alarm	Error (no disk, disk error, low space, low quota space; network disconnection; IP conflict; MAC conflict); video loss; video tampering; camera offline
Intelligent Alarm	Face detection; face recognition; perimeter protection; SMD Plus
Alarm Linkage	Record; snapshot (panoramic); IPC external alarm output; audio; buzzer; log; preset; email

Ports

Audio Input	1-channel RCA 8-channel BNC (Coaxial Audio)
Audio Output	1-channel RCA
Two-way Talk	Yes (share the same audio input with the first channel)
Disk Interface	1 SATA port. up to 16 TB. This limit varies depending on the environment temperature.
RS-485	1
USB	2 (1 front USB 2.0 port, 1 rear USB 3.0 port)
HDMI	1
VGA	1
Network Port	1 (10/100/1000 Mbps Ethernet port, RJ-45)

General

Power Supply	53 VDC, 1.812 A
Power Consumption	<10 W (without HDD)
Net Weight	1.20 kg (2.65 lb)
Gross Weight	2.36 kg (5.20 lb)
Product Dimensions	325.0 mm × 257.1 mm × 55.0 mm (12.80" × 10.12" × 2.17") (W × D × H)
Packaging Dimensions	372.0 mm × 117.0 mm × 308.0 mm (14.65" × 4.61" × 12.13") (W × D × H)
Operating Temperature	−10 °C to +55 °C (+14 °F to +131 °F)
Storage Temperature	−20 °C to +60 °C (−4 °F to +140 °F)

Operating Humidity	10%–90% (RH), non-condensing
Installation	Desktop
Certifications	CE: CE-LVD: EN 60950-1/IEC 60950-1 CE-EMC: EN 61000-3-2, EN 61000-3-3, EN 55032, EN 50130, EN 55024 FCC: Part 15 Subpart B

Ordering Information

Type	Model	Description
DIGITAL VIDEO RECORDER	DH-XVR5108H-4KL-I3-8P	8CH Penta-brid 4K Value/5MP Mini 1U 1HDD WizSense Digital Video Recorder

Accessories

Optional:



DHI-SSD-V800S256G
SSD



DHI-SSD-V800S512G
SSD




DHI-SSD-V800S1TB
SSD




DHI-ARB1606
Alarm Box

Dimensions (mm[inch])

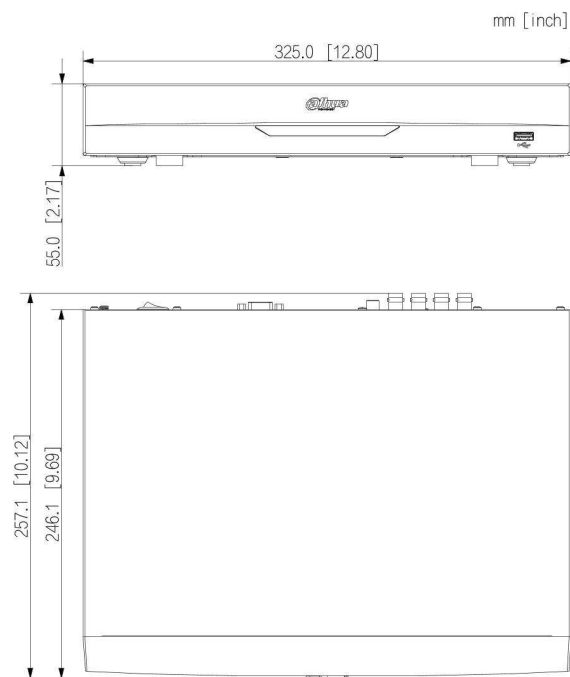

Panels

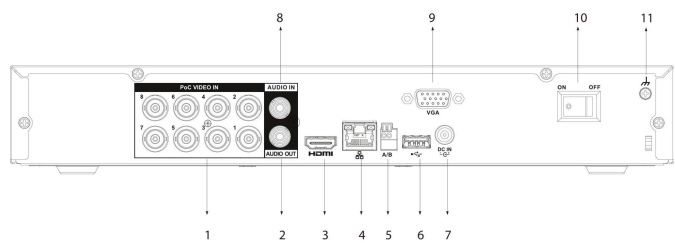

- | | |
|---------------|----------------------------|
| 1 VIDEO IN | 2 AUDIO OUT, RCA Connector |
| 3 HDMI Port | 4 Network Port |
| 5 RS-485 Port | 6 USB Port |
| 7 Power Input | 8 AUDIO IN, RCA Connector |
| 9 VGA Port | 10 Power Switch |
| 11 Ground | |